



Access & Power Integration

T2MDK7F8D

8 Door Altronix/Mercury Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane and TMV2 door backplane
- (1) eFlow104NB - Power Supply/Charger
- (1) ACM8CB - PTC Access Power Controller
- (1) VR6 - Voltage Regulator
- (1) PDS8CB - Dual Input PTC Power Distribution Module

All components of this Trove kit are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.



More than just power.™

Rev. 122821

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix T2MDK7F8D is pre-assembled and consists of Trove2M2 enclosure and TMV2 door backplane with factory installed Altronix power supply/charger and sub-assemblies. This kit also accommodates various combinations of Mercury boards for up to eight (8) doors in a single enclosure.

Configuration Chart:

Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage		Maximum Supply Current for Main and Outputs on Power Supply board and ACM8CB Access Power Controller's outputs	Fail-Safe/Fail-Secure Auto-Resettable Outputs	Current Per ACM8CB Output (A)	ACM8CB Board Input Fuse Rating	ACM8CB Board Output PTC Rating	PDS8CB Board Input PTC Rating	PDS8CB Board Output PTC Rating
				[DC]	[Aux]							
				Output Range (VDC)	Output Range (VDC)							
T2MDK7F8D	4.5	6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	24VDC @ 9.7A	8	2.0	10A/250V	2.5A	9A	2.5A

Installation Instructions:


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane(s) from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Connect unswitched AC power (120VAC 60Hz) to terminals marked [L, N]. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on. This light can be seen through the LED lens on the door of the enclosure.

Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.
CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.
Refer installation and servicing to qualified service personnel.

5. Measure voltage before connecting devices. This helps avoiding potential damage.
6. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NB and *Sub-Assembly Installation Guide* for the following models: ACM8CB, VR6, PDS8CB for further installation instructions.
7. Fasten snap on spacers onto metal pems configuration of backplane depending on the Mercury access controller (*Fig. 2-3, pg. 3-4*).
8. Position Mercury access controller module over corresponding spacers and depress onto snap on spacers (*Fig. 2-3, pg. 3-4*).
9. Mount backplane(s) to enclosure with hardware.

Fig. 1

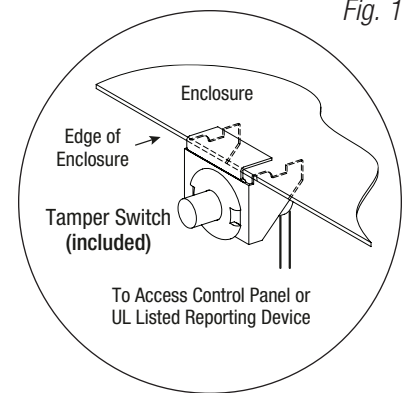

Hardware:

Snap On Spacer | 5/16" Pan Head Screw | Lock Nut

T2MDK7F8D: Configuration of Mercury Boards:

1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 2, pg. 3).
2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
EP1502, MR52, MR16IN, MR16OUT	(A)
EP2500, MUX8	(B)
EP1501, MR51e	(C)

Fig. 2


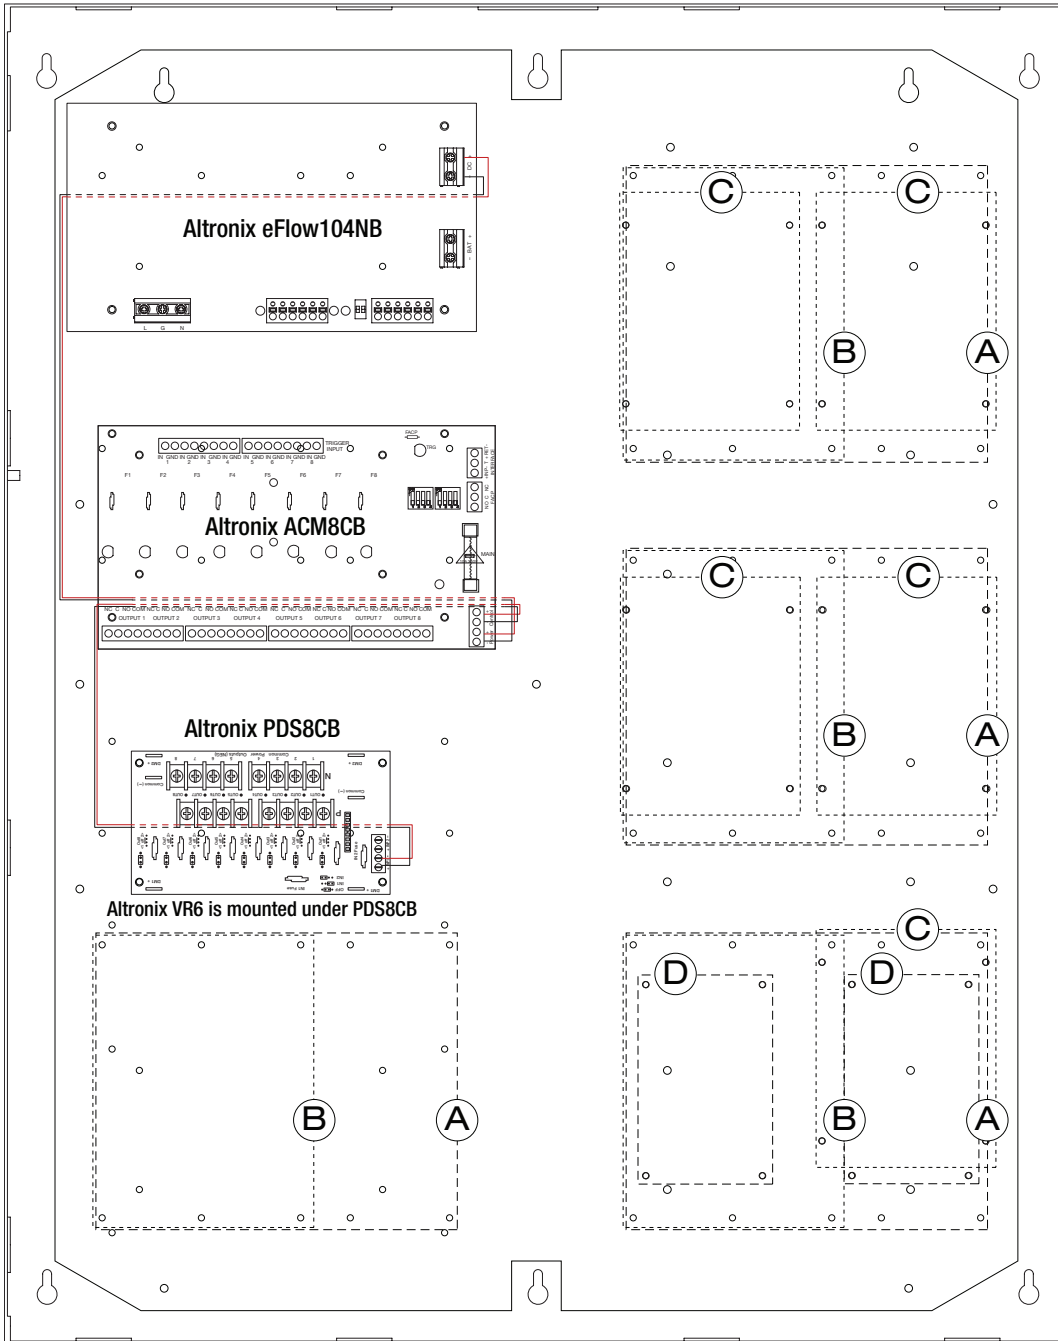


Fig. 2a

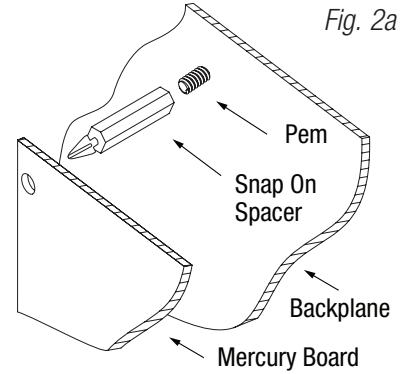

TMV2:

TMV2 accommodates a variety of Mercury boards with or without Altronix sub-assemblies for access systems.

Configuration of Mercury and/or Altronix Boards

Mercury Access Controllers:

- 1. Fasten spacers onto metal pems configuration (A) (B) of backplane depending on the access controller (Fig. 3, pg. 4).
- 2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 3a, pg. 4).
- 3. Mount backplane to enclosure with hardware.

Altronix Sub-Assemblies and/or Adapters:

- 1. Fasten spacers to pems which match the hole pattern (C) for Altronix Sub-Assemblies (Fig. 3, 3a, pg. 4).
- 2. Mount boards to spacers utilizing pan head screws provided with the product (Fig. 3, pg. 4).

Access Controller Position Chart for the Following Models:

Mercury	
Access Controller	Pem Mounting
EP1502, MR52, MR16IN, MR16OUT	(A)
EP2500, MUX8	(B)
Altronix	
Sub-Assembly or Adapter	Pem Mounting
ACM4(CB), MOM5, PD4UL(CB), PD8UL(CB), PDS8(CB), VR6, GB1 (Genetec Synergis Cloud Link adapter plate)	(C)

Fig. 3


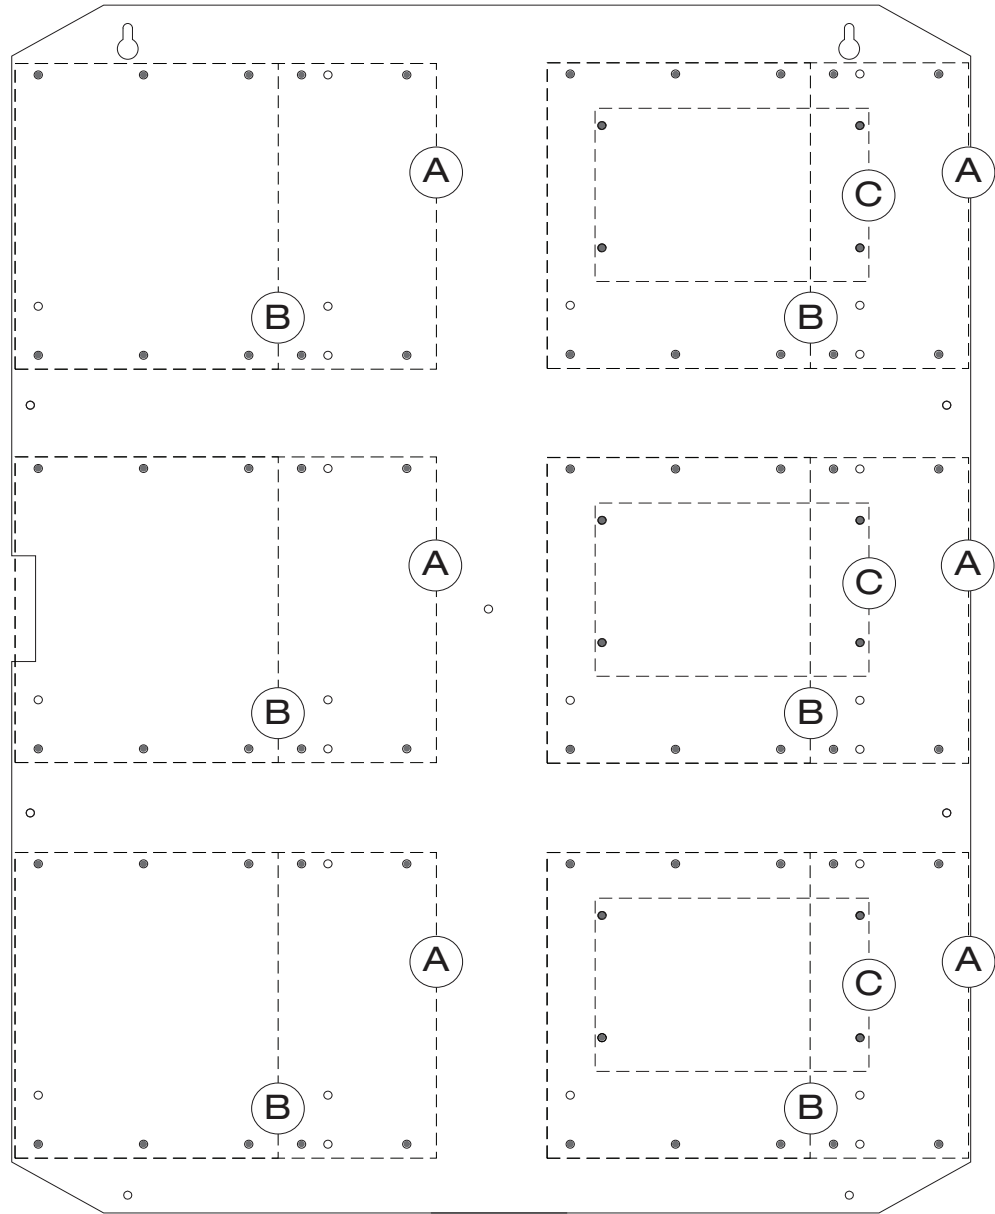


Fig. 3a

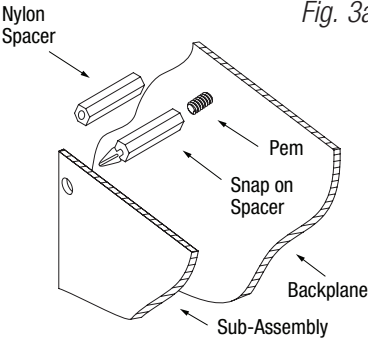


Notes:

Notes:

Notes:

Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

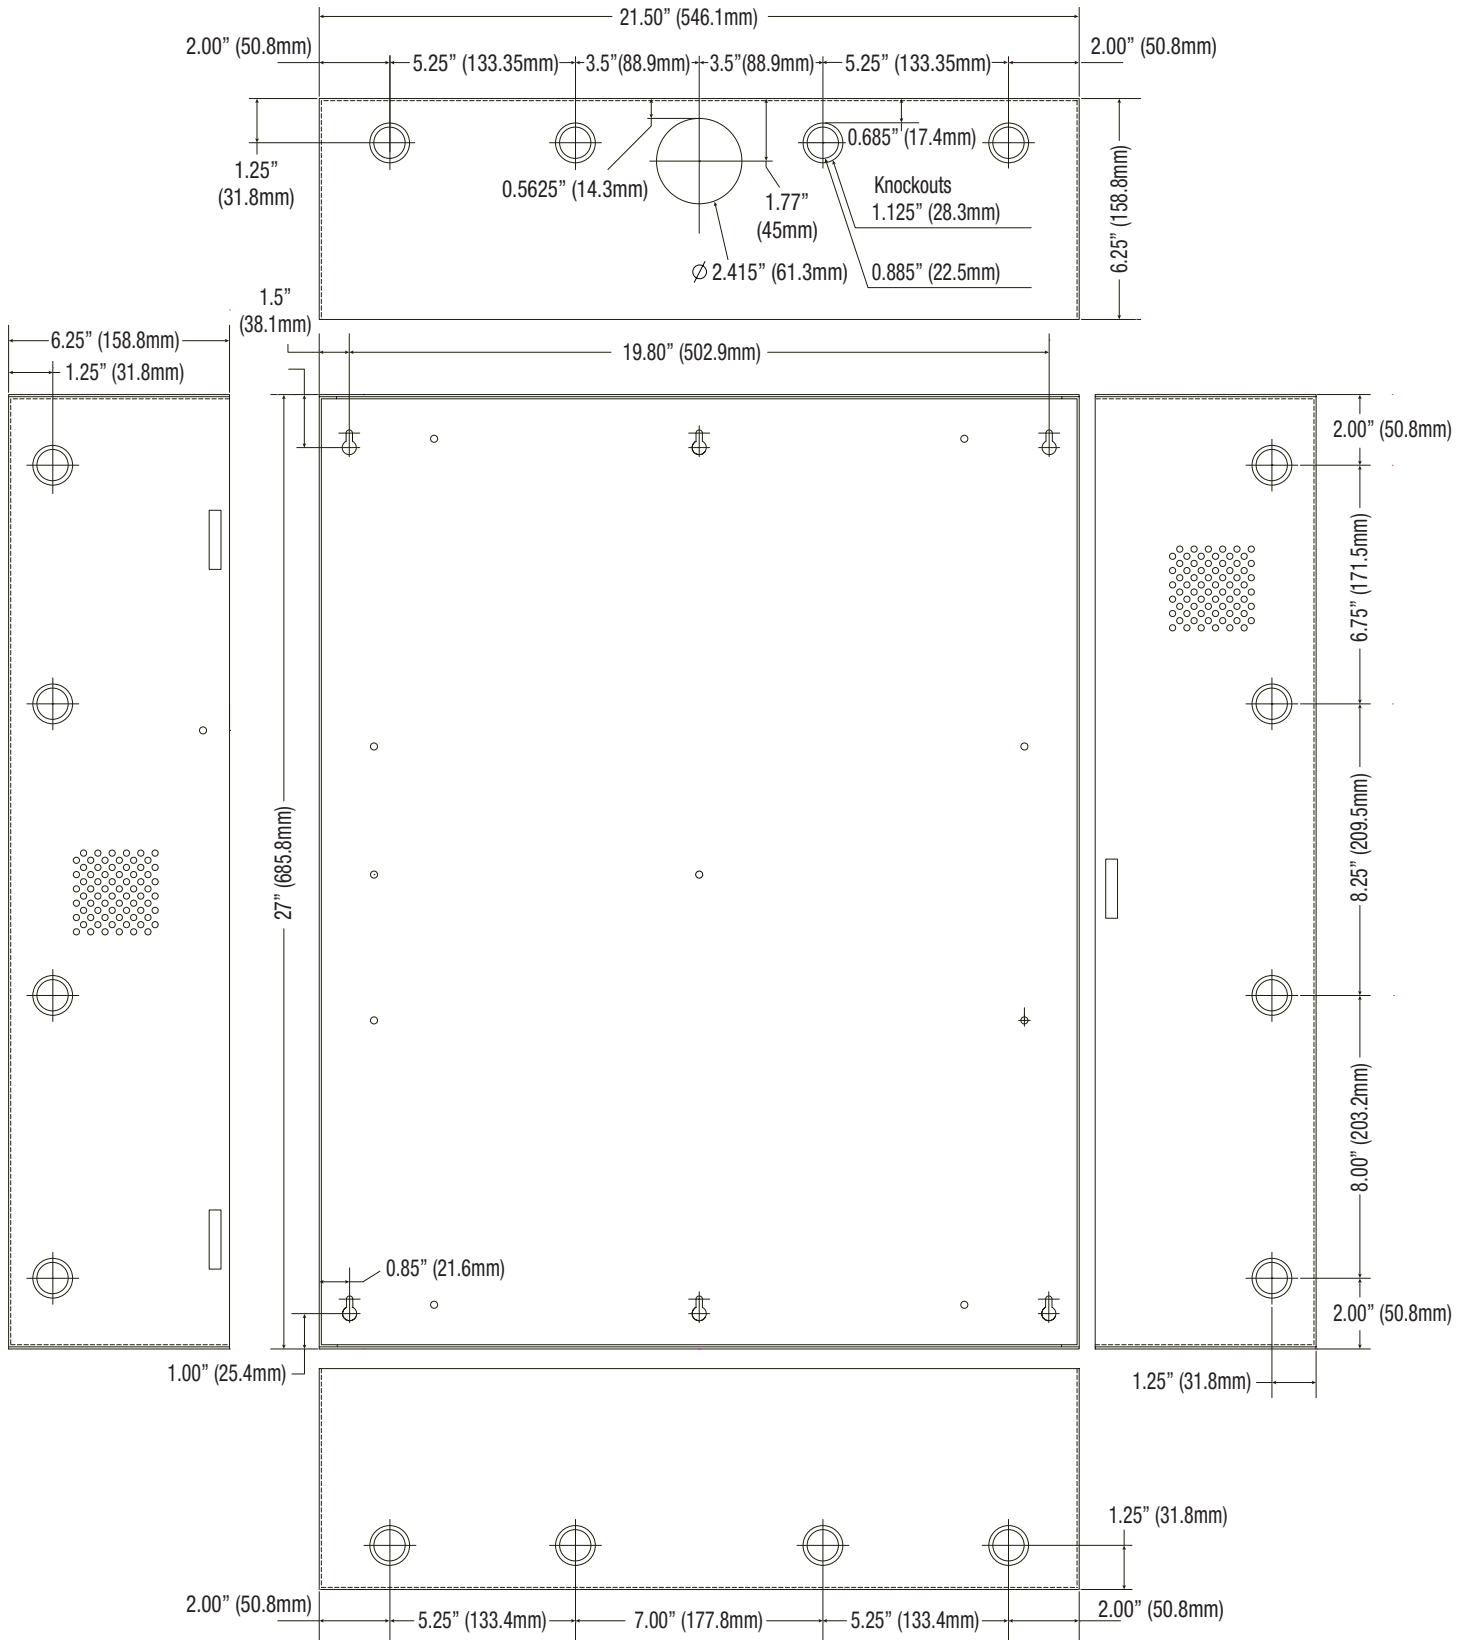

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIT2MDK7F8D

C06W



T2MDK7F8D Installation Guide