

Access & Power Integration

Altronix/Honeywell Wired Kits

Models Include:

T2HW7XK1QP

8 Door Kit with Fused Outputs

Accommodates one (1) Intelligent Controller and three (3) Dual Reader Modules.

Each fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8 - Dual Input/Output Fuse Protected Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) LINQ8PD - Networked Dual Input/Output Fuse Protected Power Distribution Module
- One (1) RSB1 - Rocker Switch Bracket with One (1) Rocker Switch
- Wire harnesses and finger duct

T2HW7XK1DQP

8 Door Kit with PTC Outputs

Accommodates one (1) Intelligent Controller and three (3) Dual Reader Modules.

Each fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8CB - Dual Input/Output PTC Protected Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) LINQ8PDCB - Networked Dual Input/Output PTC Protected Power Distribution Module
- One (1) RSB1 - Rocker Switch Bracket with One (1) Rocker Switch
- Wire harnesses and finger duct

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. 092823



More than just power.™

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix Trove Plus kits are pre-wired, pre-assembled and consist of Trove2HW2 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies, wire harnesses and management.

Configuration Chart:

Altronix Model Number	Networkable	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage Range (VDC)	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACMS8(CB) Access Power Controller's outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Current Per ACMS8(CB) and PDS8(CB) Output (A)	ACMS8(CB) Board Input Fuse (PTC) Rating	ACMS8(CB) Board Output Fuse (PTC) Rating	LINQ8PD(CB) Board Input Fuse Rating	LINQ8PD(CB) Board Output Fuse (PTC) Rating
T2HW7XK1QP	✓	4.5	5A/250V	15A/32V	20.17-26.4	24VDC @ 9.4A	8	2.5	15A/32V	3A/32V	15A/32V	3A/32V
T2HW7XK1DQP												

Hardware and Accessories:

- One(1) tamper switch (Altronix Model TS112 or equivalent).
- Cam lock.
- Battery leads.

Mechanical:

- 16 Gauge enclosure with ample knockouts for convenient access.
- Enclosure Dimensions (H x W x D): 27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm).

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device.

To activate alarm signal open the door of the enclosure.

4. Connect unswitched AC power (120VAC 60Hz) to RSB1. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground.


This light can be seen through the LED lens on the door of the enclosure.

Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.

Refer installation and servicing to qualified service personnel.

5. Measure voltage before connecting devices. This helps avoiding potential damage.
6. Refer to the *eFlowNB Power Supply/Charger Installation Guide* for eFlow104NB and corresponding *Sub-Assembly Installation Guides* for LINQ8PD, VR6 and ACMS8(CB) for further installation instructions.
7. Position Honeywell access controller modules over corresponding spacers and depress onto snap on spacers (*Fig. 2, pg. 3*).
8. Connect wire harnesses to Honeywell access controller modules (*Fig. 2, pg. 3*).
9. Mount backplane to enclosure with hardware.

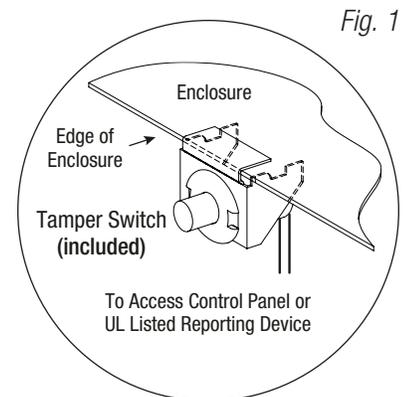


T2HW7XK1(D)QP Configuration:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2, pg. 3).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:


Honeywell Access Controller	Pem Mounting
PW7K1IC / PRO42IC	(A)
PW7K1R2 / PRO42R2	(B) (C) (D)

Fig. 2

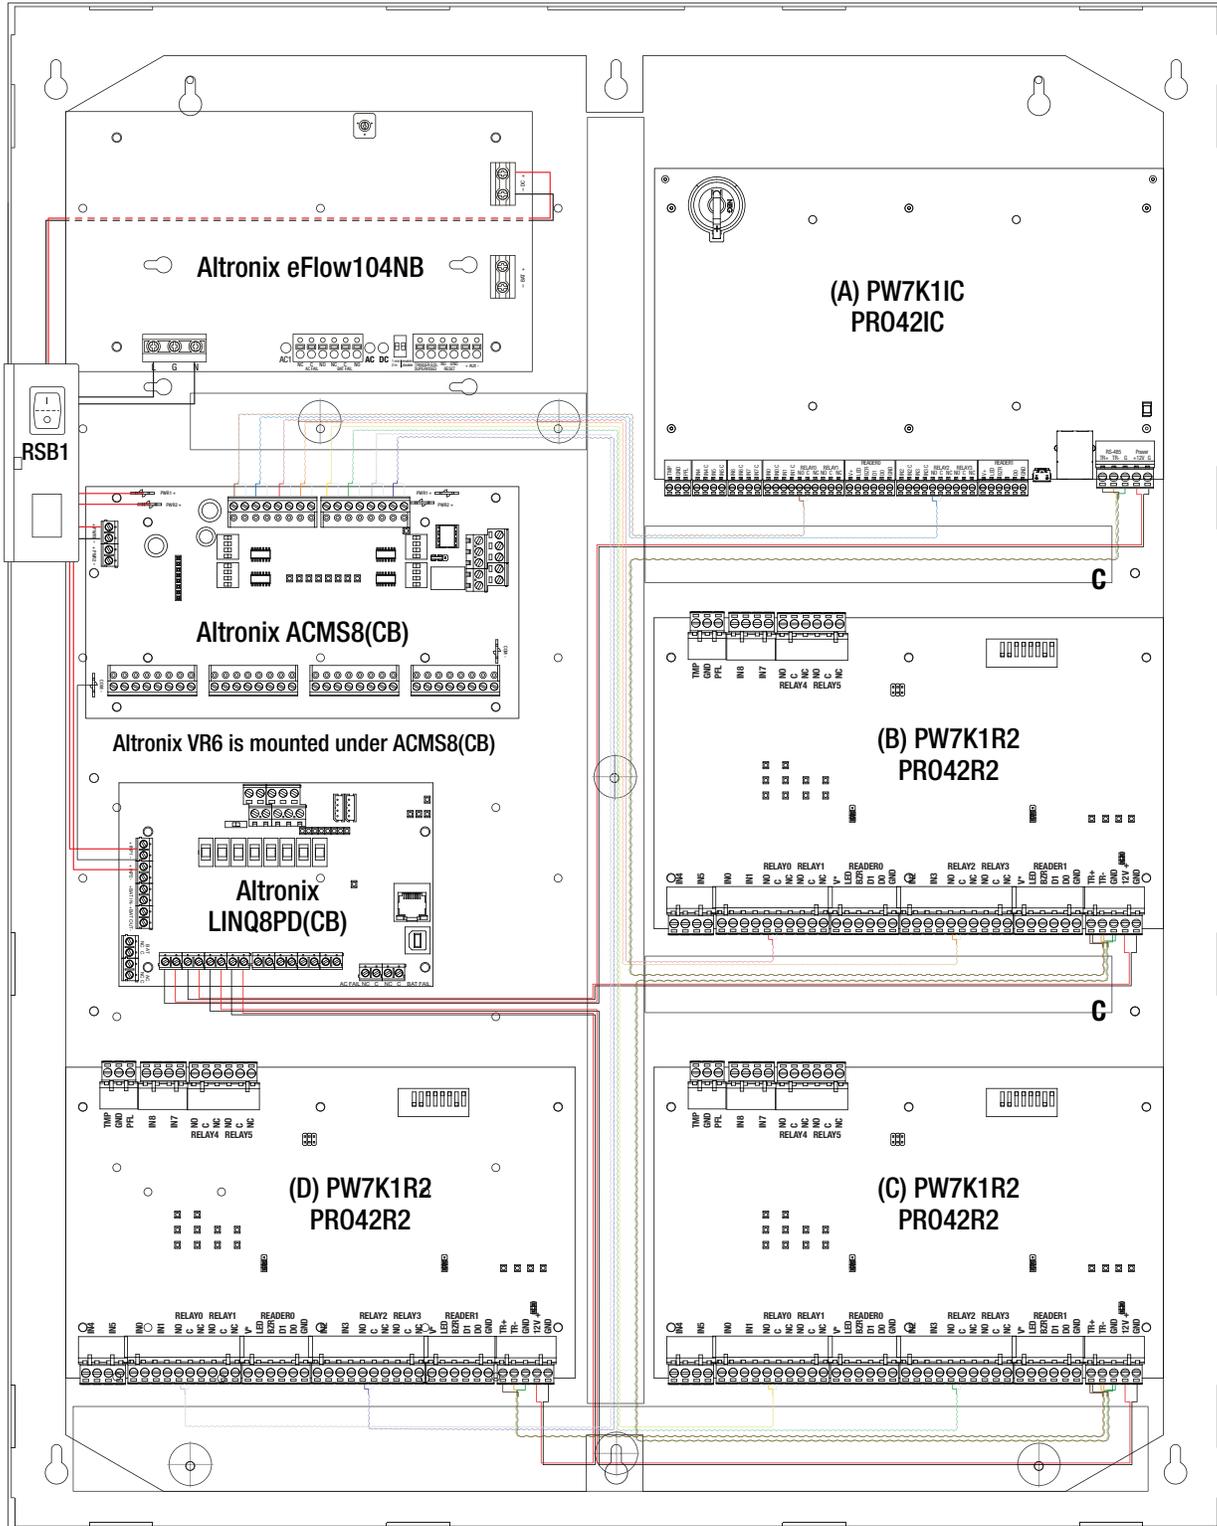

Trove2 Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

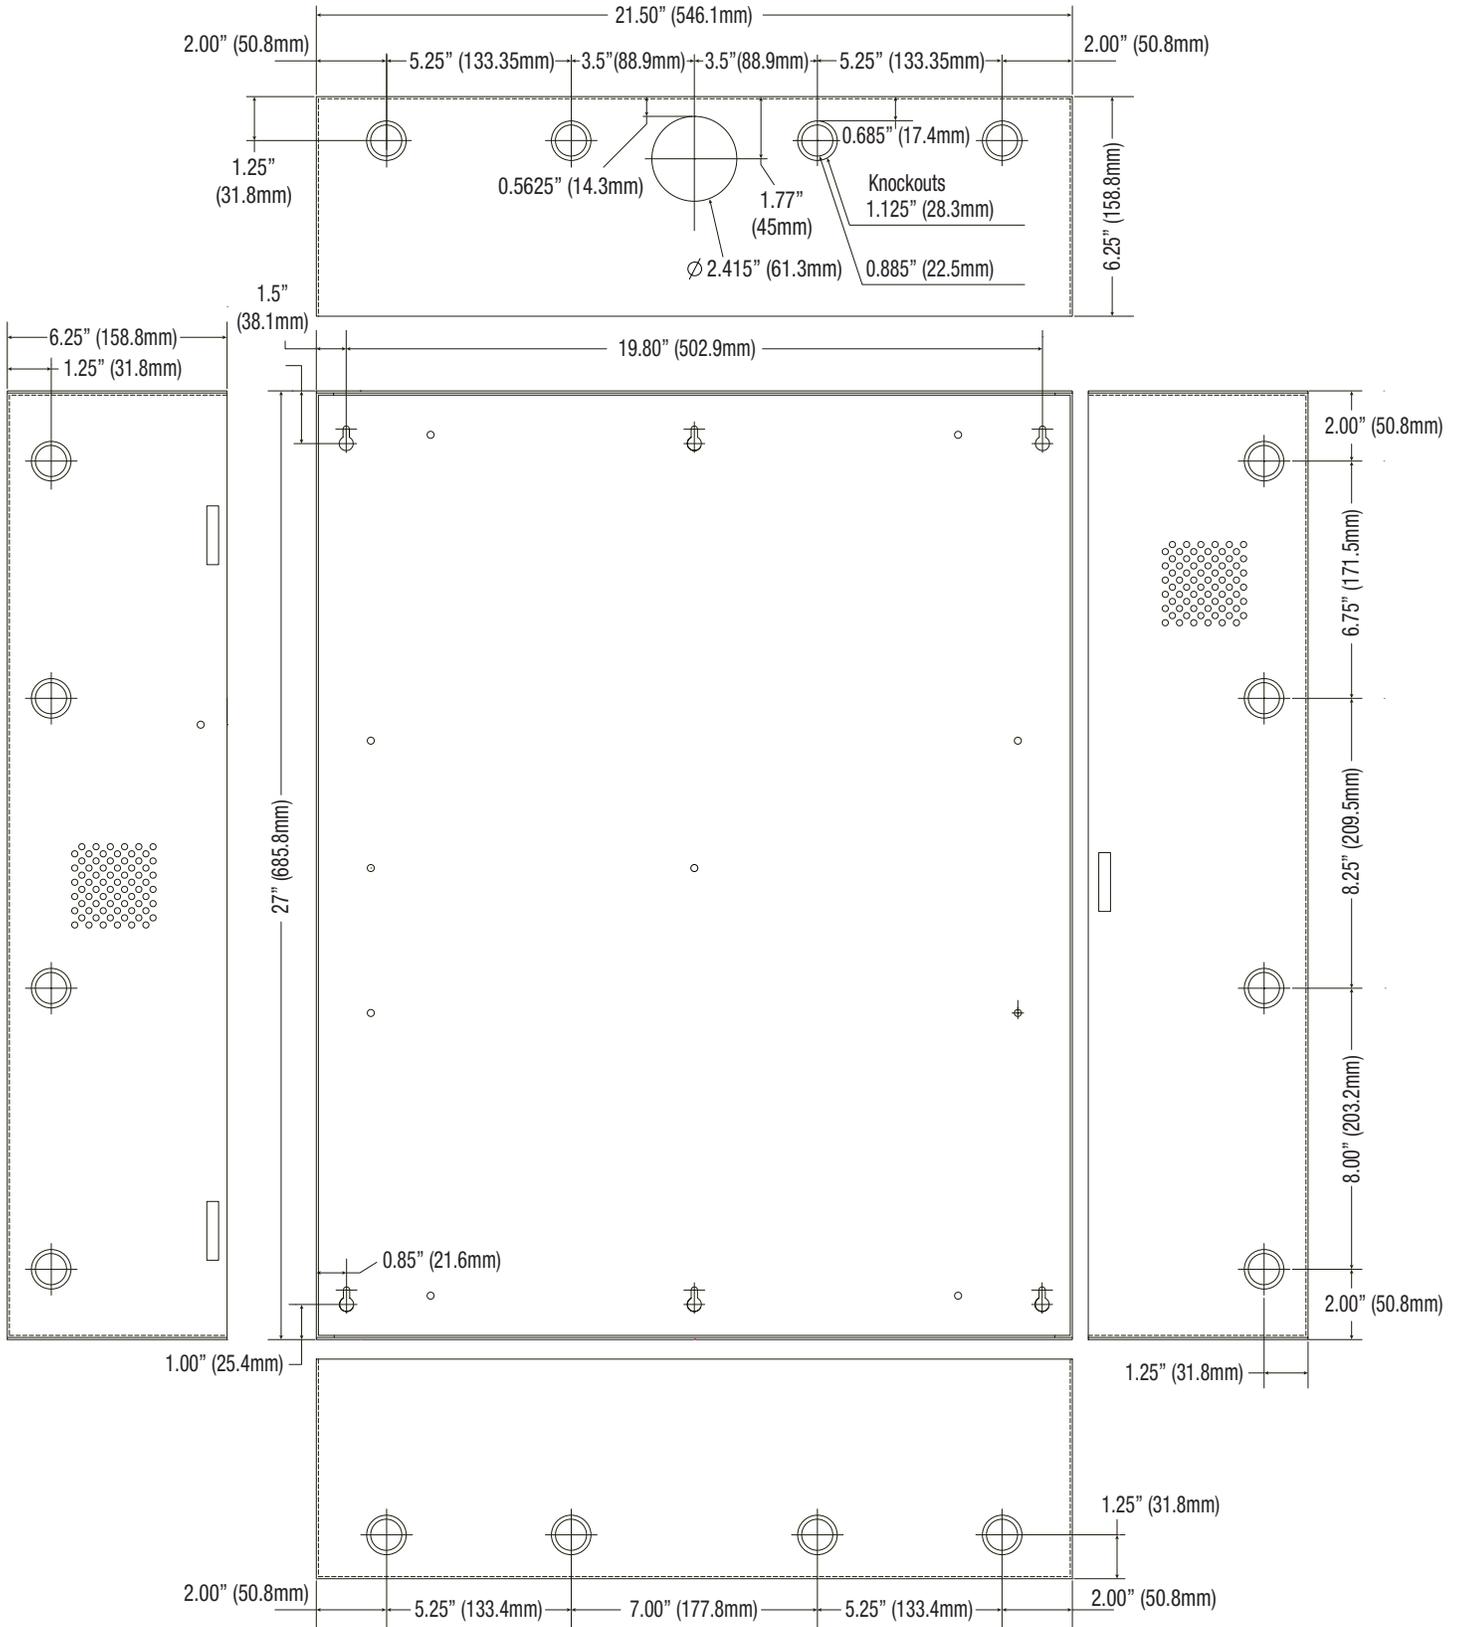

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIT2HW7XK1QP Series

I28W

