

### PSC1

Power Supply/Charger Cover

### **Overview:**

Altronix PSC1 is a protective cover for power supply/chargers for added protection conforming to safety regulations. This accessory aligns with the mounting holes of most Altronix power supply boards and includes 2-3/8" Male/ Female spacer for ease of installation above the power supply.

## Specifications:

 Mounts above most Atronix Power Supply/Charger AL300ULXB, AL400XB2V, AL400ULXB2, AL400XB2V, AL600ULXB, AL600XB220, AL1012ULXB, AL1012XB220, AL1024ULXB2, AL1024XB2V, eFlow3NB, eFlow3NBV, eFlow4NB, eFlow4NBV, eFlow6NB, eFlow6NBV, eFlow102NB, eFlow102NBV, eFlow104NB, eFlow104NBV, OLS75, OLS120, OLS120D2, OLS180, OLS180220, OLS200, OLS200220, OLS250, OLS250220.

#### Includes:

- One (1) PSC1 Power Supply/Charger Cover
- Four (4) 6/32 2-3/8" Male/Female Standoff

**Dimensions** (L x W x H approximate): 8.55" x 4.951" x 2.375" (217.7mm x 125.76mm x 60.33mm).

# Installation Instructions:


PSC1 should be installed in accordance with article 760 of The National Electrical Code or NFPA 72 as well as all applicable Local Codes.

### Retrofitting PSC1 above pre-installed Altronix Power Supply:

- 1. Align mounting holes and LED hole on PSC1 to Altronix Power Supply.
- 2. Remove Pan Head Screws (do not discard) one at a time and replace with 2-3/8" Spacers (supplied).
- 3. Align mounting holes of PSC1 above 2-3/8" Spacers and secure with Pan Head Screws.

### Installing PSC1 above Altronix Power Supply:

- 1. Fasten spacers (provided with P/S) to pems that match the hole pattern for Altronix Power Supply/Charger. Fasten metal spacers in the correct locations to provide proper grounding,
- 2. Place Altronix Power Supply/Charger secure with 2-3/8" Spacer (supplied).
- 3. Align mounting and LED holes of PSC1 above 2-3/8" Spacers and secure with Pan Head Screws.

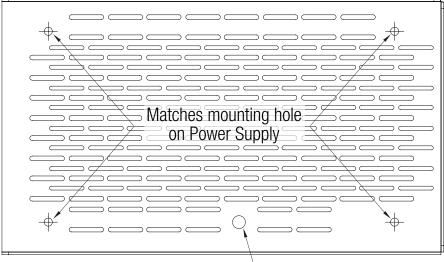

# Aligns with LED on Power Supply

Altronix is not responsible for any typographical errors.

