TROVE™

Access & Power Integration

Altronix/ZK Teco Wired Rack Kits

Models Include:

T2RZ7CK1

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2R rack enclosure with TM2R backplane
- One (1) eFlow104RLB - Power Supply/Charger
- One (1) ACMS8 - Dual Input Fused Access Power Controller
- One (1) PDS8 - Dual Input Fused Power Distribution Module
- One (1) VR6 - Voltage Regulator
- Wire harnesses and management for two (2) Atlas 460 Modules

T2RZ7CK1D

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2R rack enclosure with TM2R backplane
- One (1) eFlow104RLB - Power Supply/Charger
- One (1) ACMS8CB - Dual Input PTC Access Power Controller
- One (1) PDS8CB - Dual Input PTC Power Distribution Module
- One (1) VR6 - Voltage Regulator
- Wire harnesses and management for two (2) Atlas 460 Modules

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide

CE

Altronix®

More than just power.™

All registered trademarks are property of their respective owners.

Rev. 101124

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix Trove ZK Teco rack kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/charger and sub-assemblies. All kits accommodate two (2) Atlas 460 Modules for up to eight doors in a single enclosure.

Configuration Chart:

Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage [DC] Output Range (VDC)	Nominal DC Output Voltage [Aux] Output Range (VDC)	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACMS8(CB) Access Power Controller's outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Current Per ACMS8(CB) Output (A)	ACMS8(CB) Board Input Fuse (PTC) Rating	ACMS8(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating
T2RZ7CK1	4.5	6.3A/ 250V	15A/ 32V	20.17-26.4	20.28-26.4	24VDC @ 9.2A	8	2.5	15A/ 32V	3A/ 32V	10A/ 32V	3A/ 32V
T2RZ7CK1D								2.0	9A	2.5A	9A	2.5A


Installing Trove2R into Rack Tower:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. These products are for indoor use only and must be installed within the protected premises.

Note: First assemble and Install Z Bracket Wire Management Accesory *(refer to Z Bracket Installation pg. 3)*

1. Remove backplane from enclosure prior to installing into rack cabinet (do not discard hardware).
2. In order to mount included cUL Listed tamper switch (Tane Model 3/8 ASH FM WH or equivalent), turn the enclosure upside down and locate mounting holes *(Fig. 1, pg. 2)*. Insert the tamper switch flying leads into the center knockout of the three (3) holes from outside of the drawer with the button facing outwards, make sure tamper switch is inserted properly then secure it with the two (2) screws (supplied). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the rack drawer.
3. Slide the rack enclosure into an open 2U location in the four post rack cabinet.
4. Utilizing proper fasteners attach front ears to the rack rails *(Rack drawer, pg. 8)*.
5. Attach the rear of the adjustable slides to the rear rails of the rack cabinet with the proper fasteners.
6. Secure the rack cover *(Fig. 2a, pg. 3)* and rack drawer *(Fig. 2b, pg. 3)* to earth ground.
7. Ensure that all internal cofigurations (voltage selection, switch settings, etc.) are completed before mounting backplane back into Trove rack enclosure.

Fig. 1
Back of the drawer, viewed from outside.

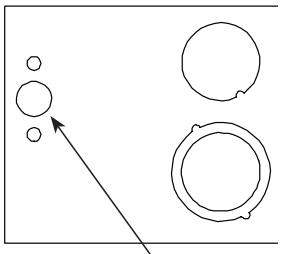

Tamper Switch mounting location

Fig. 2

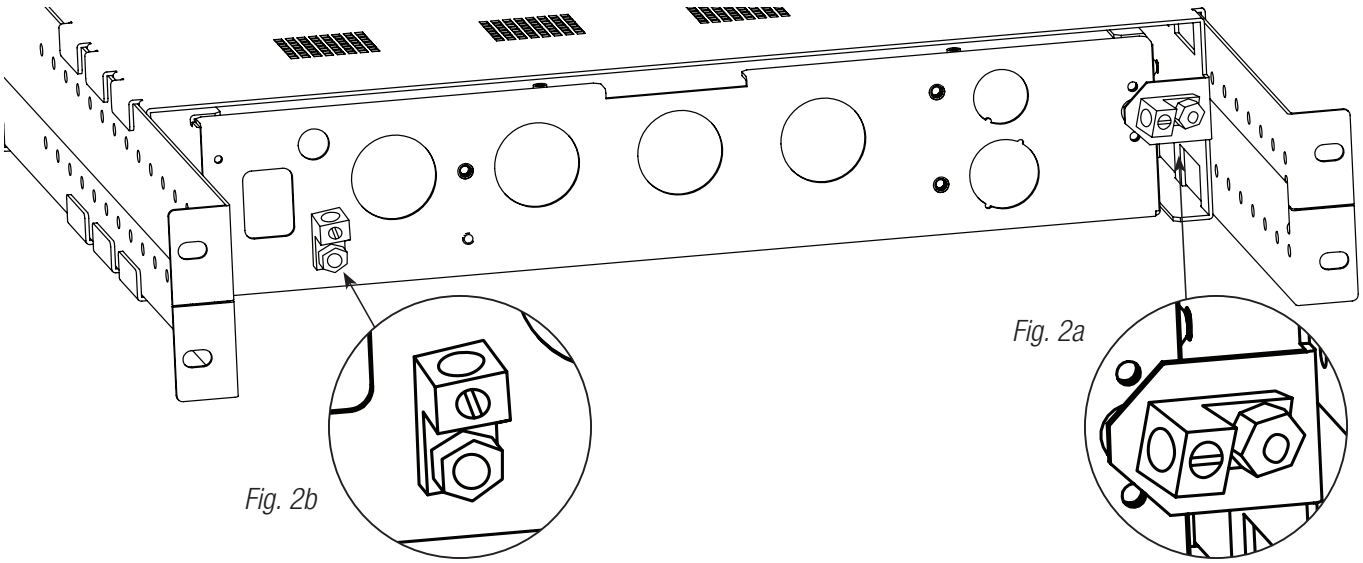


Fig. 2a

Fig. 2b


Z Bracket Installation for Trove2R:

Altronix Trove2R enclosure includes Z Bracket, a convenient and reliable wire management accessory.

Hardware (included)**:**

Twelve (12) bolts and eight (8) lock nuts.

Fig. 3

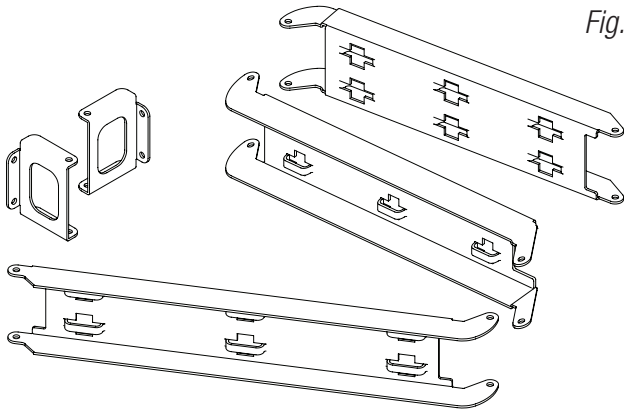


1. Carefully unpack Z Bracket. Do not discard included hardware (*Fig. 3, pg. 3)*.
2. Attach arms to each other using bolts and lock nuts *(Fig. 4a, pg. 3)*.
3. Attach the hinge brackets to the ends of arms using bolts and nuts, positioning them as shown on *(Fig. 4b, pg. 3)*.
4. Make sure that all nuts are tightened.

Fig. 4

Fig. 4a

Fig. 4b

Fig. 3b

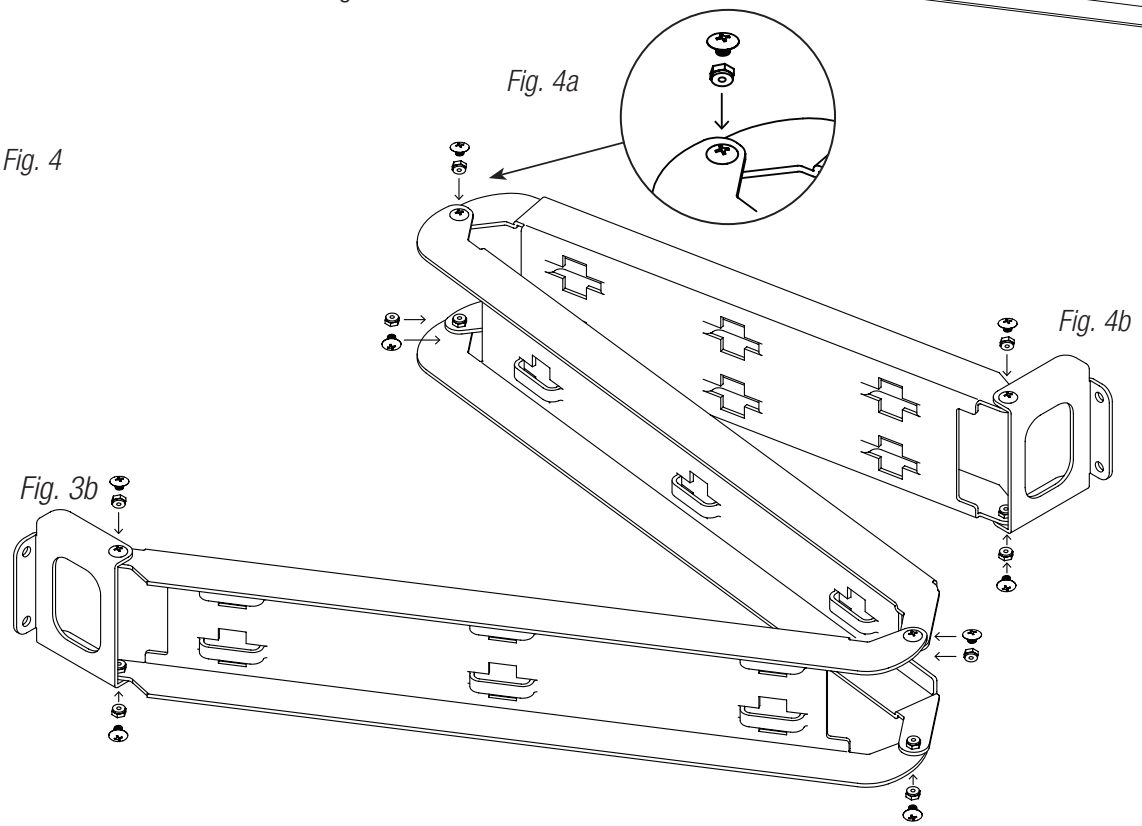

5. Attach the hinge bracket on each end of Z Bracket, then attache the Z Bracket to the adjustable slide using bolts and lock nuts (included) *(Fig. 5, 5a, pg. 3)*.
6. Attach the hinge bracket on the shorter side of Z Bracket to the rear of the rack enclosure using bolts (included).

Fig. 5


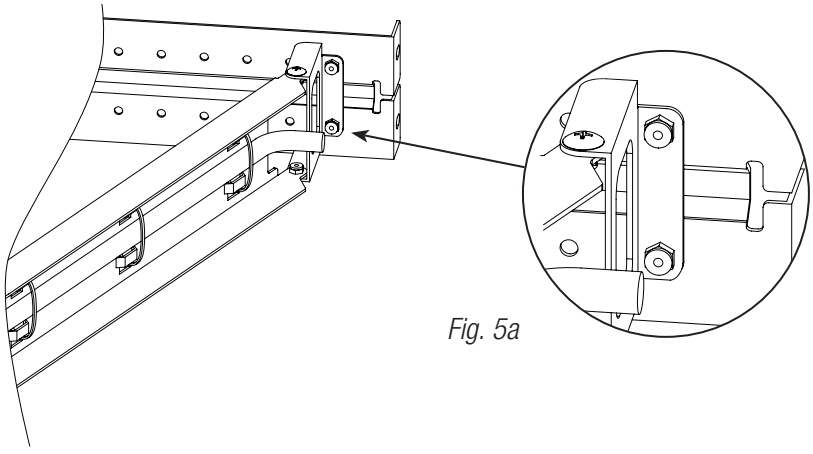


Fig. 5a

T2RZ7CK1(D): Configuration of ZK Teco Modules:

1. Fasten DIN Rail (provided by ZKTeco) to pem spacers, utilizing 5/16" pan head screws (included) *(Fig. 6, pg. 4)*.
2. Mount Atlas 460 Modules to DIN Rail *(Fig. 6, pg. 4)*.
3. Mount backplane to enclosure with hardware.

Fig. 6

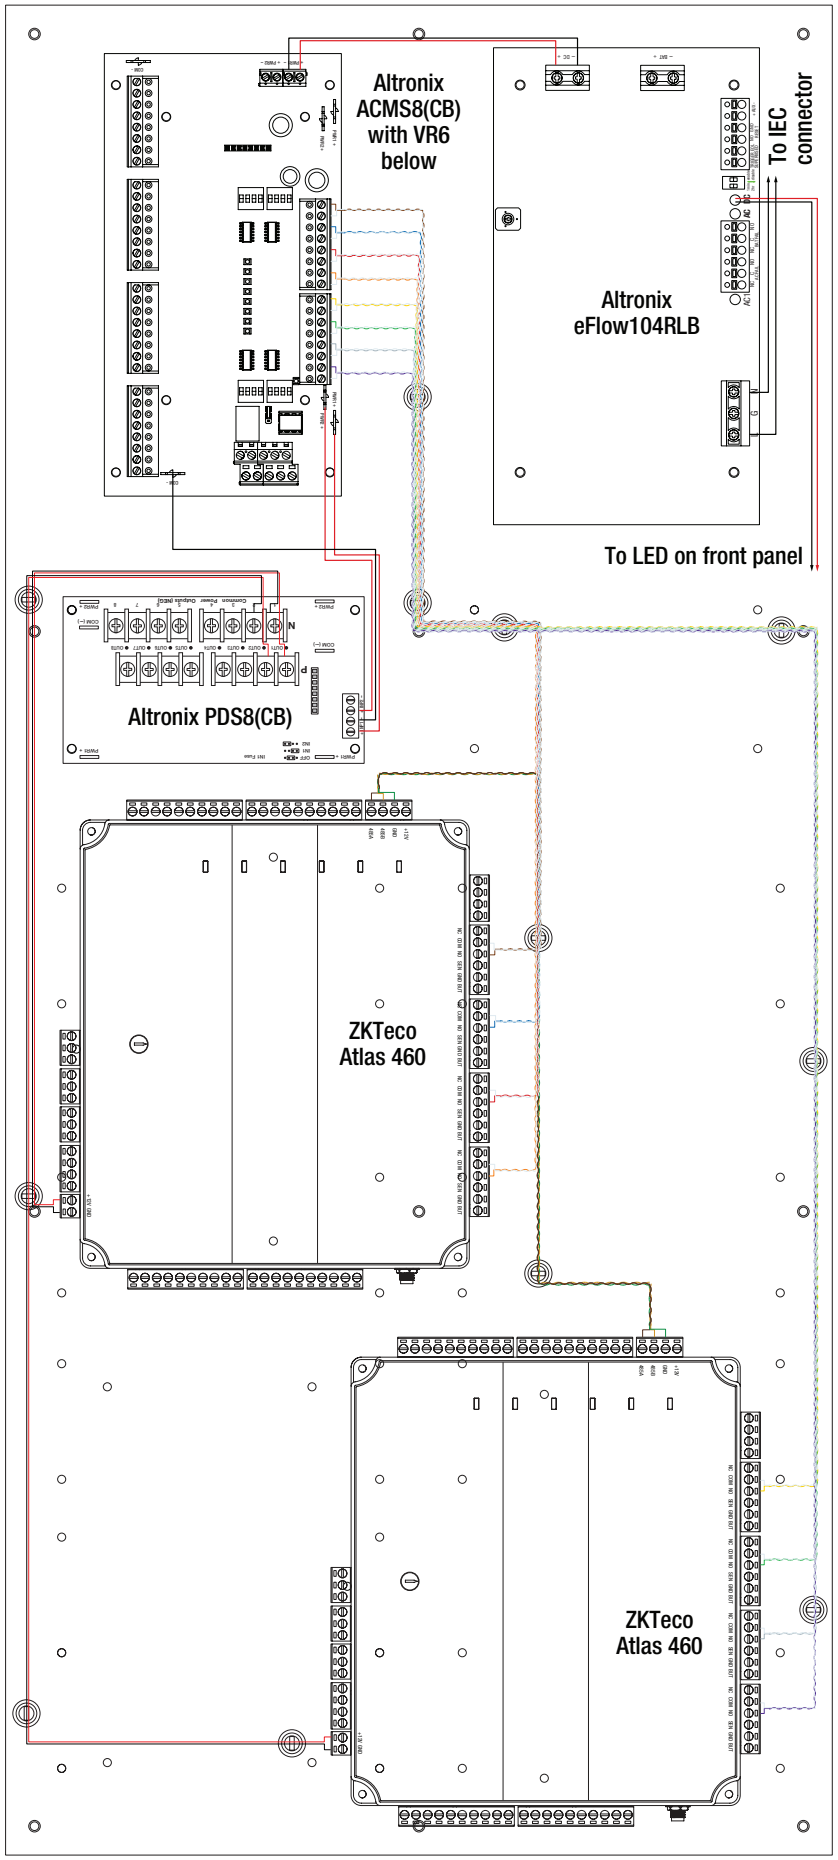


Notes:

Notes:

Notes:

Trove2R Enclosure Dimensions (H x W x D approximate)**:**

3.25” x 19.0” x 33.25” (82.6mm x 482.6mm x 844.6mm). Shown with Z Bracket attached.

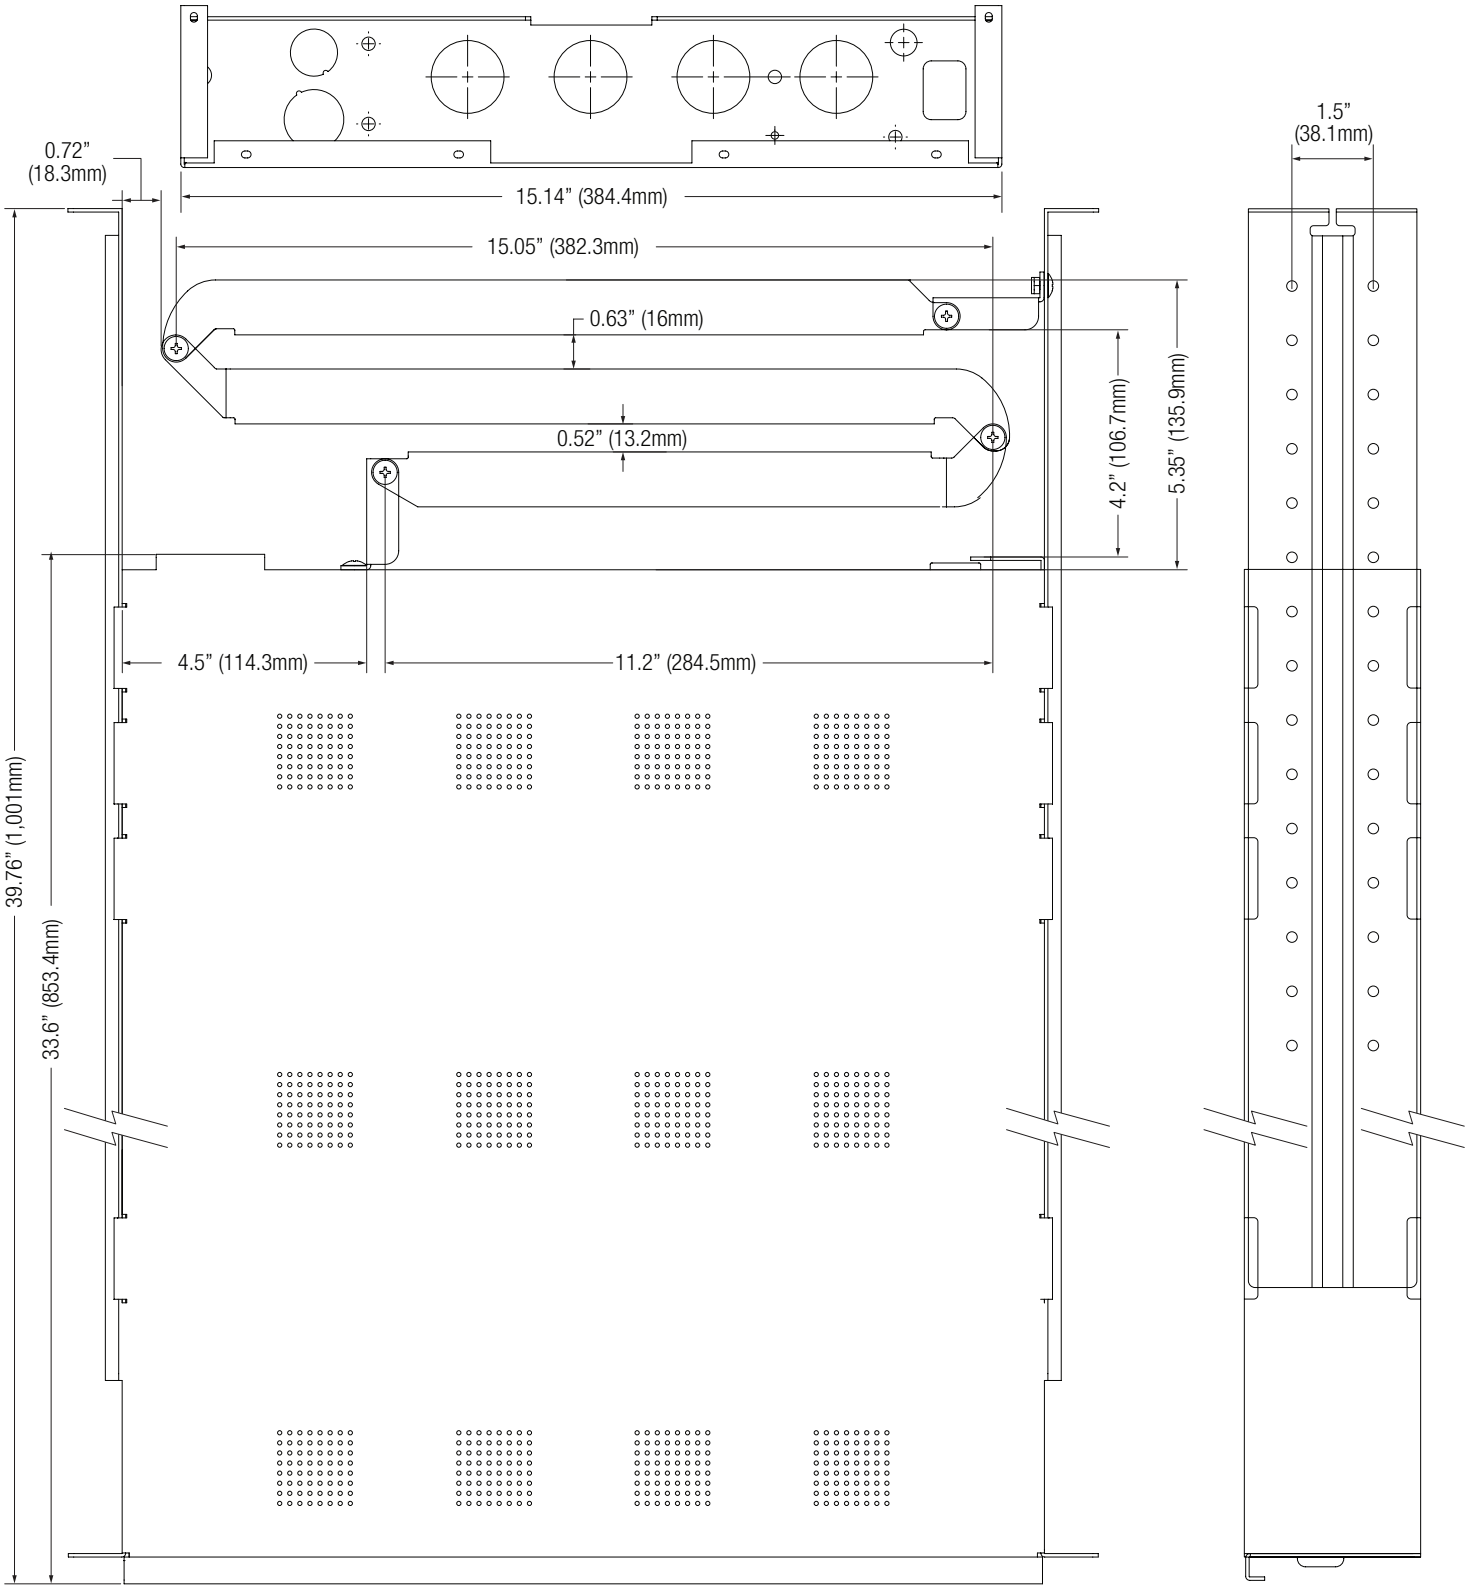

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty