

TRIVE™

Access & Power Integration

Altronix/HID Aero Kits

Models Include:

T3VK77F16S

16 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with TV3 Altronix/HID Aero backplane
- (2) eFlow104NB - Power Supply/Chargers
- (2) VR10 - Voltage Regulators
- (2) ACMS8 - Dual Input Fused Access Power Controllers
- (3) PDS16 - Dual Input Fused Power Distribution Modules
- (1) BR1 - Mounting Bracket
- (1) RSB2 - Rocker Switch Bracket with
Two (2) Rocker Switches

T3VK77F16SD

16 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove3 enclosure with TV3 Altronix/HID Aero backplane
- (2) eFlow104NB - Power Supply/Chargers
- (2) VR10 - Voltage Regulators
- (2) ACMS8CB - Dual Input PTC Access Power Controllers
- (3) PDS16CB - Dual Input PTC Power Distribution Modules
- (1) BR1 - Mounting Bracket
- (1) RSB2 - Rocker Switch Bracket with
Two (2) Rocker Switches

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. 022124

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



More than just power.™

Overview:

Altronix Trove HID Aero kits are pre-assembled and consist of Trove3V3 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. These kits also accommodate various combinations of HID Aero boards for up to sixteen (16) doors in a single enclosure.

Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage				Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACMS8(CB) Access Power Controller's outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Current Per ACMS8 and PDS16(CB) Output (A)	ACMS8(CB) Board Input Fuse (PTC) Rating	ACMS8(CB) Board Output Fuse (PTC) Rating	PDS16(CB) Board Input Fuse (PTC) Rating	PDS16(CB) Board Output Fuse (PTC) Rating
				Power Supply 1		Power Supply 2								
				[DC]	[Aux]	[DC]	[Aux]							
T3VK77F16S	9	6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	16	2.5	15A/32V	3A/32V	15A/32V	3A/32V
T3VK77F16SD		6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	16	2.0	9A	2.5A	9A	2.5A

Installation Instructions:


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

- Remove backplane from enclosure. Do not discard hardware.
- Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
- Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
- Connect unswitched AC power (120VAC 60Hz) to terminals marked [L, N]. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on. This light can be seen through the LED lens on the door of the enclosure.
Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.
CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.
Refer installation and servicing to qualified service personnel.
- Measure voltage before connecting devices. This helps avoiding potential damage.
- Mount HID Aero boards to backplane, refer to *page 3*.
- Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NB and *Sub-Assembly Installation Guide* for ACM8(CB), PDS8(CB) and VR6 for further installation instructions.

Fig. 1

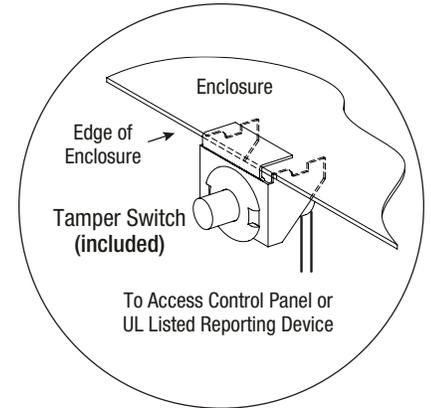

Hardware:

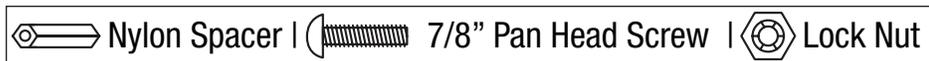

T3VK77F16SD: Installation Instructions for HID Aero Access Controllers

1. Fasten spacers (provided) onto metal pems configuration (A) of backplane (Fig. 4, pg. 5).
2. Mount HID Aero modules to spacers utilizing 7/8" pan head screws (provided) (Fig. 4a, pg. 5).
3. Fasten backplane to Trove3 enclosure utilizing hardware (provided).

HID Aero Access Controller Position Chart for the Following Models:

Sub-Assembly	Pem Mounting
X100, X200, X300, X1000, X2000	(A)

Fig. 4



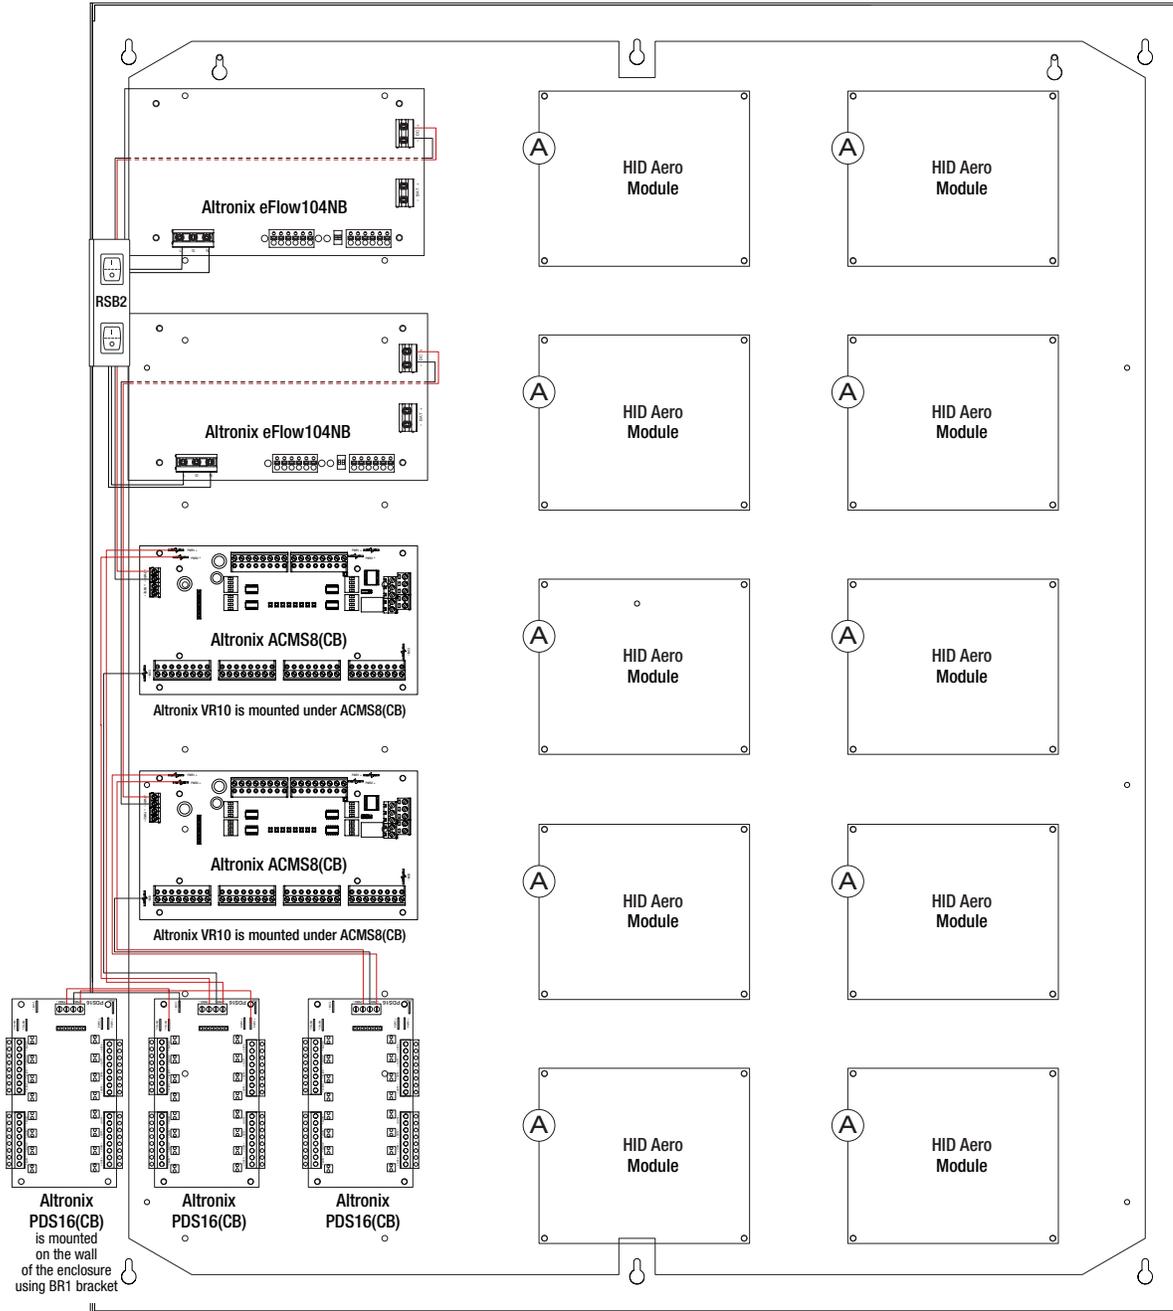


Fig. 4a

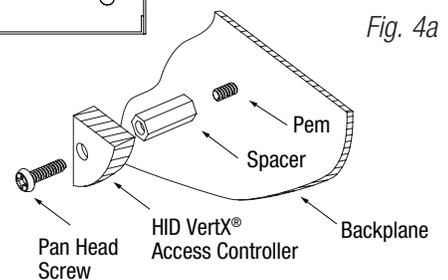

Enclosure Dimensions (H x W x D approximate): 36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

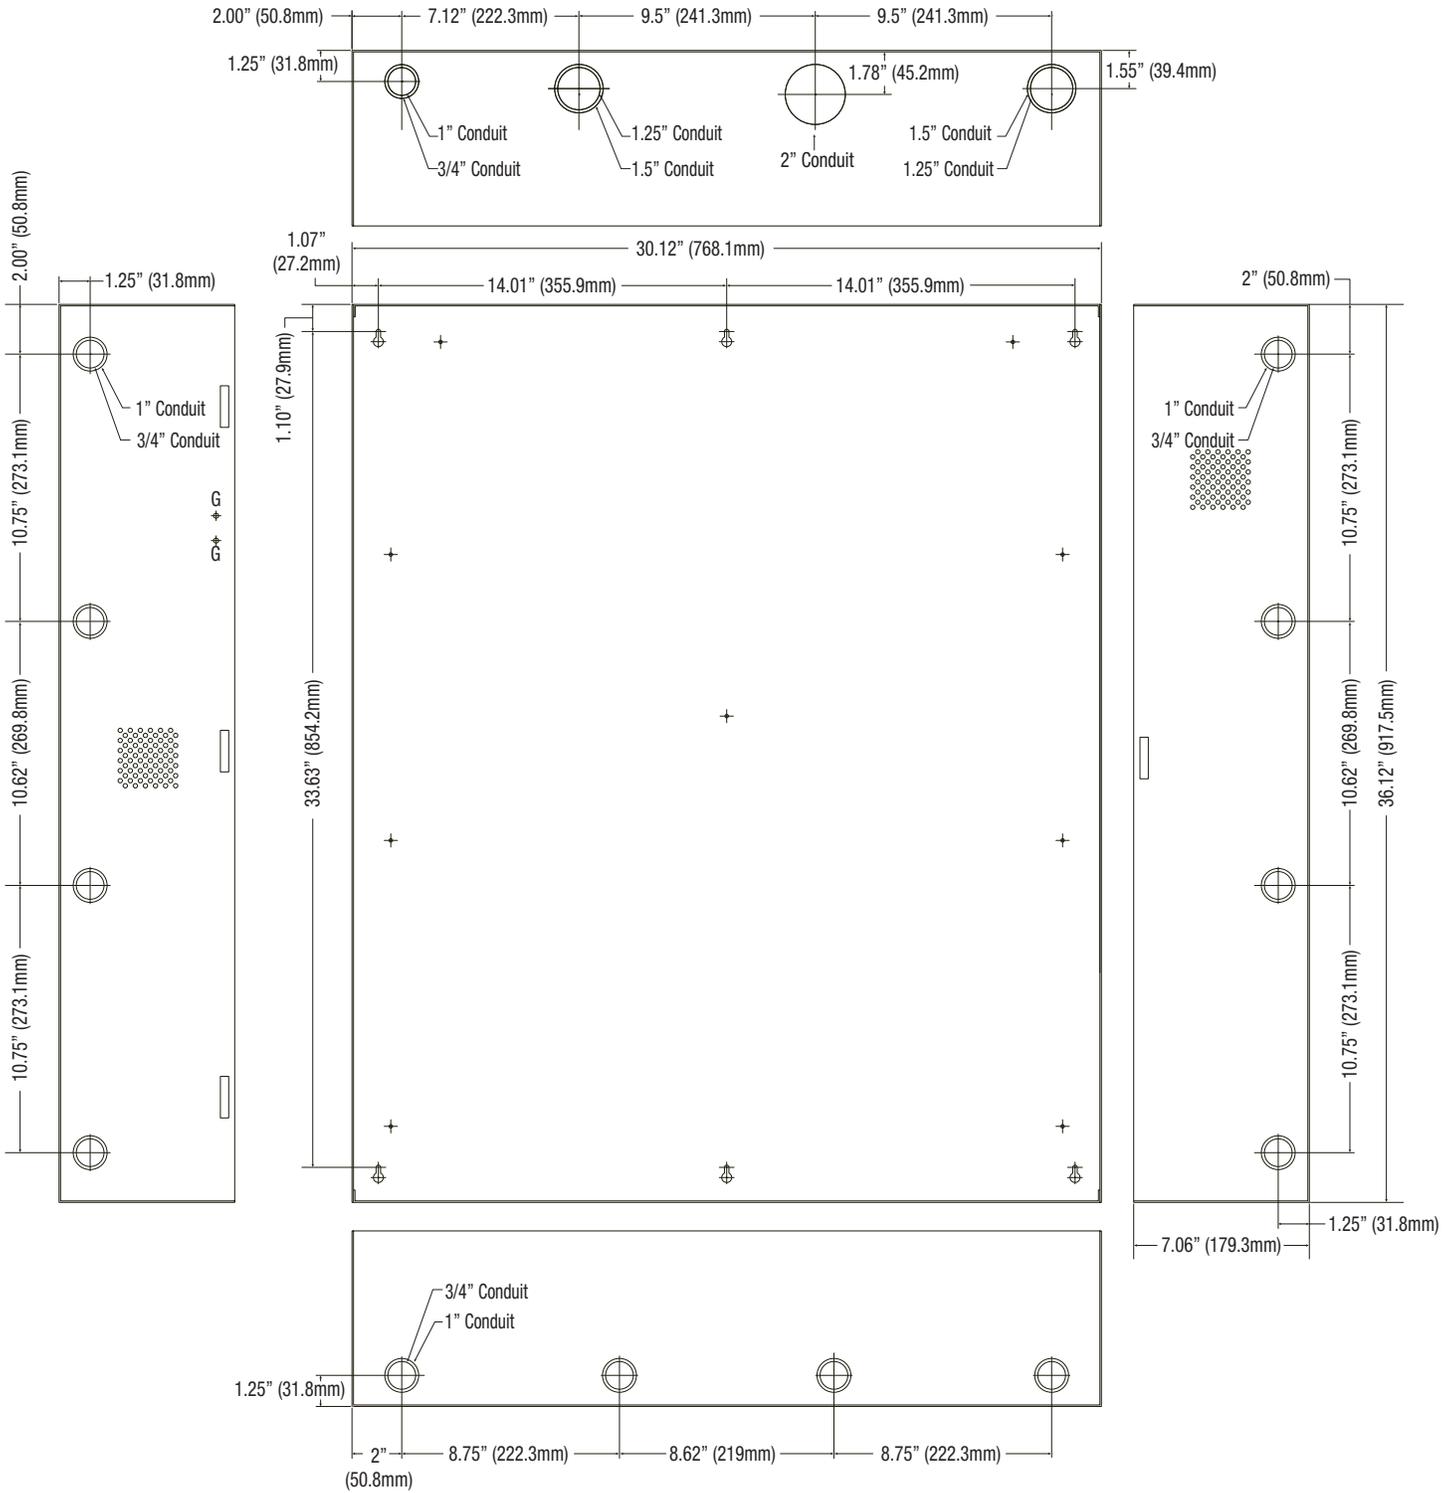

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIT3VK77F16S(D)

B21X

