

Altronix/Mercury Rack Kits

Models Include:

T1RM3F4V

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1R rack enclosure with TM1R Altronix/Mercury backplane
- (1) eFlow6NBV Power Supply/Charger
- (1) VR6 Voltage Regulator
- (1) PDS8 Fused Dual Output Power Distribution Module
- (1) ACM4 Fused Access Power Controller

T1RM3F4DV

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1R rack enclosure with TM1R Altronix/Mercury backplane
- (1) eFlow6NBV Power Supply/Charger
- (1) VR6 Voltage Regulator
- (1) PDS8CB PTC Dual Output Power Distribution Module
- (1) ACM4CB PTC Access Power Controller

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide

CE

Rev. T1RM3F4V 080720



More than just power.™

Installing Company:	Service Rep. Name:		
Address:		Phone #:	

Overview:

Altronix T1RM3F4V and T1RM3F4DV rack kits are pre-assembled and consist of Trove1M1R enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. These kits also accommodate various combinations of Mercury/LenelS2 boards for up to four (4) doors in a single enclosure.

Configuration Charts:

				Nomir Output		Maximum Supply Current for Main and Aux. Outputs on			Rating	e or ts	Rating	Rating
	€	Board ting	, Board Rating	[DC]	[Aux]	Power Supply board,	t (A)	g		Secure of Outputs		
Altronix Model Number	220VAC 50/60Hz P/S Input Current	Power Supply Boa Input Fuse Rating	Power Supply Bo Battery Fuse Rat	24VDC Output Range (V)	24VDC Output Range (V)	PDS8(CB) Power Distribution Module and ACM4(CB) Access Power Controller's outputs (A)	Current Per ACM4(CB) Output (ACM4(CB) Board Input Fuse Rating	ACM4(CB) Board Output Fuse (PTC)	Fail-Safe/Fail-Secure Dry Form "C" Output	PDS8(CB) Board Input Fuse (PTC)	PDS8(CB) Board Output Fuse (PTC)
T1RM3F4V	2.5	5A/	10A/	20.28-	20.28-	24VDC @ 5.6A	2.5	10A/ 250V	3A/ 32V	4	10A/ 32V	3A/ 32V
T1RM3F4DV	2.5	250V)V 32V 26	26.4 26.4	24VDC @ 5.0A	2.0	10A/ 250V	2.5A	4	9A	2.5A	

Hardware and Accessories:



Specifications:

Agency Listings:

CE European Conformity.

Mechanical:

- Black enclosure with ample knockouts for convenient access.
- Includes: tamper switch, cam lock and mounting hardware.
- Modular 2U standard EIA 19" drawer with extendable slides up to 48".
- Dimensions (H x W x D): 3.375" x 19.0" x 26.5" (85.8mm x 482.6mm x 673.1mm)

Included Accessories:

- One (1) tamper switch (Altronix Model TS112 or equivalent).
- · Cam lock.

Available Accessories (not included):

- RE2: Rack Mount Battery Enclosure accommodates up to four (4) 12VDC/7AH batteries.
- WM5, WM25, WM100: Magnetic Cable Tie Mounts (5, 25, 100 counts).

- 2 - T1RM3F4(D)V Installation Guide

Installation Instructions for T1RM3F4(D)V:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. These products are for indoor use only and must be installed within the protected premises.


Note: First assemble and Install Z Bracket Wire Management Accesory *(refer to Z Bracket Installation pg. 4)*

- Remove backplane from enclosure prior to installing into rack cabinet (do not discard hardware).
- 2. In order to mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) turn the enclosure upside down. Punch out the knockout in designated location, on the back of the unit, from outside of the drawer (Fig. 1, pg. 3). Insert the tamper switch into the knockout from outside of the drawer with the button facing outwards and spaded connectors inside the drawer. Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device.


To activate alarm signal open the rack drawer.

- 3. Slide the rack enclosure into an open 2U location in the four post rack cabinet.
- 4. Utilizing proper fasteners attach front ears to the rack rails.
- 5. Attach the rear of the adjustable slides to the rear rails of the rack cabinet with the proper fasteners.
- 6. Secure the rack cover (Fig. 2a, pg. 3) and rack drawer to earth ground (Fig. 2b, pg. 3).





Tamper Switch mounting location

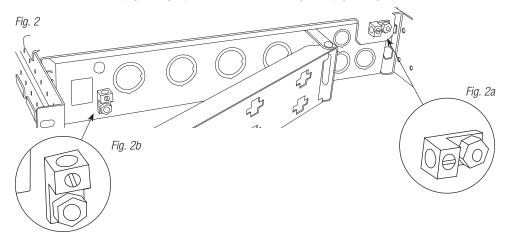


- Make sure that all internal configurations (wiring, voltage selection, switch settings, etc.) are complete before mounting backplane back into enclosure.
- 8. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NBV and corresponding sub-assembly Installation Guides for the following models: ACM4(CB), PDS8(CB), VR6 for further instructions.

T1RM3F4(D)V Installation Guide - 3 -


Assembling and Attaching

Z Bracket Wire Management Accessory (included):

Altronix Trove Rack enclosures include Z Bracket, a convenient and reliable wire management accessory.

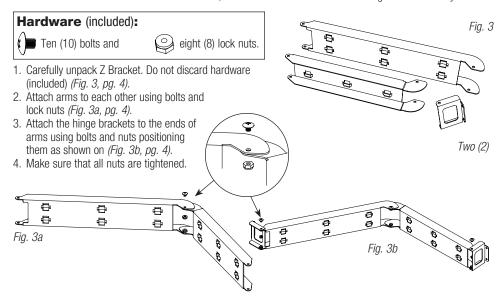

- 5. Attach the hinge bracket on the longer side of Z Bracket to the adjustable slide using bolts and lock nuts (included) (Fig. 4, 4a, pg. 4).
- 6. Attach the hinge bracket on the shorter side of Z Bracket to the rear of the rack enclosure using bolts (included).

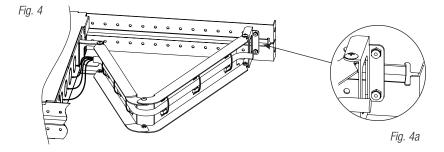


T1RM3F4(D)V: Configuration of Mercury Boards:

- 1. Fasten spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 5, pg. 5).
- 2. Position access controller module over corresponding spacers and fasten screws into spacers (Fig. 5a, pg. 5).
- 3. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury/LenelS2 Access Controller	Pem Mounting
LP1502, MR52, MR16IN, MR16OUT	A
LP2500, MUX8	(B)
LP1501, MR62e	©
MR50	(D)

Fig. 5

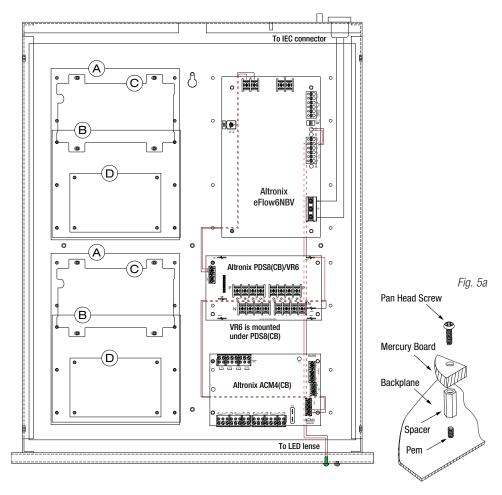

T1RM3F4(D)V Installation Guide - 5 -

Notes:


- 6 - T1RM3F4(D)V Installation Guide

Notes:

T1RM3F4(D)V Installation Guide - 7 -

Trove1R Enclosure Dimensions:

3.375" x 19.0" x 26.5" (85.8mm x 482.6mm x 673.1mm). Shown with Z Bracket attached.

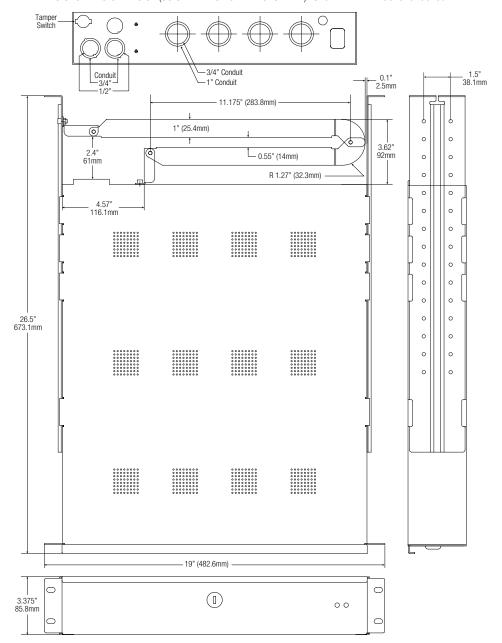

Altronix is not responsible for any typographical errors.



