



Please be sure to visit altronix.com for latest firmware and installation instructions

Fiber Solution

NetWay4EL Series

Hardened Ethernet over Fiber PoE+ Switch with Optimized Lithium Iron Phosphate Battery Charger

Models Include:

NetWay4ELWP

- Fiber Optic SFP 1G Link, 4-port PoE+ switch and power supply.
- NEMA4/4X, IP66 rated Outdoor enclosure.

NetWay4ELWPX

- Fiber Optic SFP 1G Link, 4-port PoE+ switch and power supply.
- NEMA4/4X, IP66 rated Outdoor enclosure.
- Accommodates one (1) 12V LiFePO₄ battery.

NetWay4ELX

- Fiber Optic SFP 1G Link, 4-port PoE+ switch and power supply.
- NEMA1 rated Indoor enclosure.

NetWay4ELPL

- Fiber Optic SFP 1G Link, 4-port PoE+ switch and power supply.
- Backplane version

Installation Guide



DOC#: NetWay4EL Rev. 012521

More than just power.™

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Table of Contents:

Overview	pg. 3
Features	pg. 3
Enclosure/Backplane Mounting Instructions	pg. 4
Installation Instructions	pg. 4
Recommended Altronix SFP Modules	pg. 4
Technical Specifications	pg. 5
Typical Applications Drawing	pg. 5
Configuring Units for Network Connection	pg. 6
VLans	pg. 6
Configuring vLan on the Altronix NetWay4EL Series Switch	pg. 6
Factory Reset Option	pg. 6
Typical Vlan Setup	pg. 7
Wall Mount Installation	pg. 8
Pole Mounting Using Optional Pole Mount Kit	pg. 8
Mechanical Drawings and Dimensions	pg. 9-12

Overview:

Altronix NetWay Spectrum Indoor/Outdoor Hardened Ethernet over Fiber PoE+ Switches with Optimized Lithium Iron Phosphate Battery Charger provide a 1Gb SFP port and four (4) POE IEEE802.3af/3at & Hi POE ports, passing data and power to PoE/PoE+ compliant devices. These units are designed to support a single 12V LiFePO₄ (**Lithium Iron Phosphate**) battery for high storage and charge/discharge cycle life reliability (only a single battery is needed). Embedded LINQ Technology allows to monitor, control and report power and diagnostics from anywhere.

Features:

Agency Listings:

- CE European Conformity.

Input:

- 115VAC, 60Hz, 2.5A or 230VAC, 50/60Hz, 1.3A.

Power Output:

- Four (4) 10/100/1000 Mbps Ethernet ports rated at 30W each (limited to 75W total power).
- IEEE 802.3af, 802.3at compliant.
- Integral surge protection.

Fiber Port:

- One (1) Gigabit SFP port.
- Use with SFP module 1000Base-X (1Gb), compliant to Class 1 laser product (not included).

Ethernet Ports:

- Four (4) 10/100/1000 Mbps ports.
- Connectivity: RJ45, auto-crossover.
- Wire type: 4-pair CAT5 or better structured cable.
- Distance: up to 100m.
- Speed: 10/100/1000 Mbps, half/full duplex, auto negotiation.

Applications:

- Provides PoE / PoE+ for cameras/devices.

Battery Backup:

- Built-in charger for 12V LiFePO₄ (**Lithium Iron Phosphate**) battery.

Caution: Do not use lead acid or gel type batteries.

- Automatic switch over to stand-by battery when AC fails.

Environmental:

- Operating Ambient Temperature:
 60W: – 40°C to 75°C (– 40°F to 167°F);
 75W: – 40°C to 70°C (– 40°F to 158°F);
 (if LiFePO₄ battery is installed within enclosure, the temperature range is 0°C to 40°C (32°F to 104°F)).
- Relative Humidity: 85%, +/- 5%
- Storage Temperature:
 – 40°C to 85°C (– 40°F to 185°F).
- Operating Altitude: – 304.8 to 2,000m.

LINQ Technology:

- Remote network management allows for camera/device reset and monitoring.
- Provides local and/or remote access to critical information via LAN/WAN.
- Email and Windows Dashboard Alert notifications report real-time diagnostics.
- Event log tracks history.

LEDs:

- Individual **PoE On** LEDs for each port.
- Individual **IP Link status**, **100/1000 Base-T/active** LEDs for each port.
- **ALOS** LED indicates fiber connection for SFP port.
- **Heartbeat** LED indicates proper operation of the unit.

Accessories:

NetWaySP1A

- Ethernet over Fiber Media Converter/Repeater - for applications requiring an additional SFP (Fiber) port.

P1MM

- SFP multi-mode transceiver (distances up to 550m).

P1SM10

- SFP single mode transceiver (distances up to 10km).

P1AB2K

- SFP single strand single mode transceiver kit (distances up to 2km).

P1GCE

- SFP Copper Transceiver for use with CAT5e or better (distances up to 100m).

PMK1 and PMK2

- Pole Mount Kits for outdoor enclosures.

BTL125

- 12VDC 4.5AH Lithium Iron Phosphate Battery.

Mechanical:

NetWay4ELWP

- NEMA4/4X, IP66 Rated enclosure for outdoor use.
- Dimensions (H x W x D approx.):
 13.31" x 11.31" x 5.59"
 (338.1mm x 287.3mm x 142mm).

NetWay4ELWPX

- NEMA4/4X, IP66 Rated enclosure for outdoor use.
- Accommodates one (1) 12V LiFePO₄ (**Lithium Iron Phosphate**) battery.

Note: LiFePO₄ batteries have a restricted temperature range (0°C to 40°C).

- Dimensions (H x W x D approx.):
 17.375" x 12" x 6.5"
 (441.3mm x 304.8mm x 165.1mm).

NetWay4ELX

- Dimensions (H x W x D approx.):
 13.5" x 13" x 3.25" (342.9mm x 330.2mm x 83mm).

NetWay4ELPL

- Dimensions (H x W x D approx.):
 10.75" x 8.875" x 2.375"
 (273.1mm x 225.4mm x 60.3mm).

Enclosure/Backplane Mounting Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. All units should be installed by a trained service personnel.

NetWay4ELWP/WPX Enclosure Mounting and Installation:

1. Remove backplane from enclosure prior to drilling. Do not discard hardware.
Note: Make sure that hardware will not interfere with components of the circuit board.
2. Mark and drill desired inlets on the enclosure to facilitate wiring. Maximum NEMA type 4X rated fittings to be used are 0.5". Follow manufacturer's specifications for the appropriate size opening.
Note: Inlets for conduit fittings should only be made on the bottom of the enclosure.
UL Listed NEMA type 4X rated conduit connector/hubs shall be used for the appropriate size inlets.
3. Clean out the inside of enclosure before remounting circuit board.
4. Mounting NEMA4/4X rated enclosure (*Enclosure Dimensions*, pgs. 13-16):
Wall mount: Mount unit in desired location. Mark and drill holes to line up with the top and bottom holes of the enclosure flange. Secure enclosure with appropriate fasteners (e. g. screws and anchors; bolts and locking nuts, etc.) that are compatible with mounting surface and are of sufficient length/construction to ensure a secure mount (*Fig. 6*, pg. 12).
Pole Mount: Refer to *Figs. 7 - 11*, pg. 12.
5. Mount backplane in enclosure with hardware.
6. To facilitate wire entry utilize weather-tight NEMA rated connectors (*supplied*), bushings, and cable.

NetWay4ELX Enclosure Mounting and Installation:

1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two (2) upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two (2) upper screws; level and secure. Mark the position of the lower two (2) holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two (2) upper screws. Install the two (2) lower screws and make sure to tighten all screws (*Enclosure Dimensions*, pg. 9). Secure enclosure to earth ground.

NetWay4ELPL Mounting and Installation:

1. Mount backplane in the desired location/enclosure with hardware supplied (*Backplane Dimensions*, pg. 10).

Installation Instructions:

1. Secure cabinet to earth ground. Connect AC power from overcurrent protective device circuit breaker (20A @ 115VAC, 60Hz, 16A @ 230VAC, 50/60Hz) to the terminals marked [L, N] on power supply board (*Fig. 1*, pg. 4). Use 14AWG or larger for all power connections (Battery, DC output, AC input).
Connect ground lug $\oplus$ to earth or green branch wire (12AWG min.).
Keep power-limited wiring separate from non power-limited wiring by utilizing separate knockouts/inlets. Minimum 0.25" spacing must be provided.
CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.
Refer installation and servicing to qualified service personnel.
2. Connect structured cables from port marked [Port 1] to [Port 4] on NetWay unit to PoE compliant cameras/edge devices (*Fig. 3*, pg. 5).
Note: All interconnected devices must be UL Listed.
3. Insert SFP module into port marked [SFP], then connect cable to the SFP module on NetWay4EB to the corresponding input of an SFP switch (*Fig. 3*, pg. 5).
4. **Battery Backup** (if desired): Connect one (1) 12V LiFePO₄ (Lithium Iron Phosphate) battery to terminals marked [+ BAT -] (*Fig. 2*, pg. 4), carefully observing polarity.
Use Altronix **BTL125** 12V/4.5AH Lithium Iron Phosphate battery.
Note: LiFePO₄ batteries have a restricted temperature range.
For outdoor battery backup, battery enclosure must have sufficient ventilation. Use Altronix Vent2 kit.
Note: When battery is not used, a loss of AC will result in the loss of output voltage.
CAUTION: Do not use lead acid or gel type batteries.
5. Please ensure that the cover is secured with:
Key lock and screws for **NetWay4ELX**, latches and optional Altronix Lock1WP for **NetWay4ELWP/WPX**.

Fig. 1


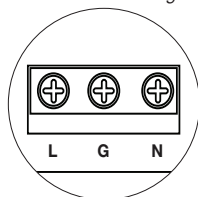


Fig. 2

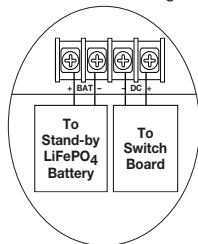

Recommended Altronix SFP Modules:

Altronix P1MM, P1SM10, P1AB2K and P1GCE are hot-pluggable SFP fiber transceiver modules and are readily usable with all Altronix Spectrum fiber optic equipment for 1Gb transmission rates.

P1MM - For use with Multi-Mode Fiber for distances up to 550m.

P1SM10 - For use with Single-Mode Fiber for distances up to 10km.

P1AB2K - For use with Single Strand Single-Mode Fiber for distances up to 2km.


P1GCE - For use with CAT5e or better for distances up to 100m.

Technical Specifications:

Parameter	Description		
Number of Ports	Four (4) 10/100/1000 Mbps Ethernet ports. IEEE 802.3af, 802.3at compliant. One (1) Gigabit SFP Port.		
Input Power Requirements	115VAC, 60Hz, 2.5A or 230VAC, 50/60Hz, 1.3A.		
Environmental Conditions	Operating Ambient Temperature: 60W : – 40°C to 75°C (– 40°F to 167°F); 75W : – 40°C to 70°C (– 40°F to 158°F); With LiFePO₄ battery installed : 0°C to 40°C (32°F to 104°F). Relative Humidity: 85%, +/- 5% Storage Temperature: – 40°C to 85°C (– 40°F to 185°F). Operating Altitude: – 304.8 to 2,000m.		
Weights (approx.)	Model	Product Weight	Shipping Weight
	NetWay4ELWP	10.72 lb. (4.86 kg)	12.1 lbs. (5.49 kg)
	NetWay4ELWPX	15 lb. (6.8 kg)	17.5 lbs. (7.9kg)
	NetWay4ELX	6.85 lb. (3.11 kg)	7.75 lbs. (3.51 kg)
	NetWay4ELPL	2.8 lb. (1.27 kg)	4.2 lbs. (1.9 kg)

Typical Applications:

Fig. 3

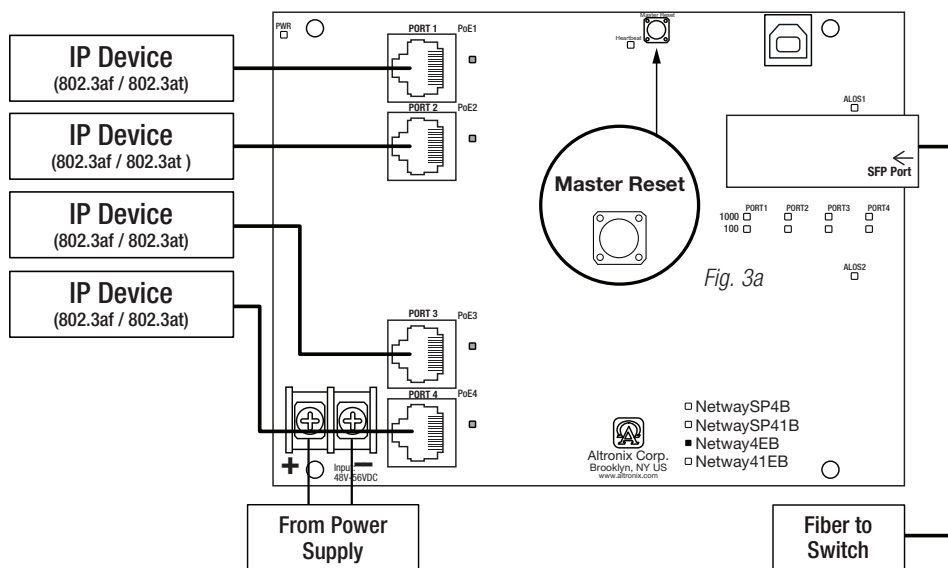

Configuring Unit for Network Connection:

Visit altronix.com for the latest firmware and installation instructions

VLans

VLans (Virtual Local Area Networks) are a subnetwork that allow for the grouping together of devices for improved network traffic as well as providing higher security by allowing greater control over which devices have access to each other. It is important to plan how you will setup your devices for each vLan.

Configuring vLan on the Altronix Netway4EL Series Switch:

1. Ensure Laptop or PC being used to program the vLan settings is on a port that will be assigned to your first vLan configuration. By default the management portion of the software is assigned to vLan-1.
CAUTION: Changing VID=1, the industry standard VLAN HOST address to any other VID address should be done with caution and performed only locally, since the change will drop the original HOST connection. Local access then facilitates a physical reconnection to respective port.
Note: Only this vLan network allows access to IP management.
2. In Network Section click on vLan Tab.
3. Click Add vLan.
4. Enter a name for the vLan.
5. Enter a vLan ID, i.e. 10, 20, etc. Ensure this vLan ID is associated with a vLan setup on the main switch and that your Laptop or PC being used for programming is on this same ID.
Note: vLan ID could be any value 2-4094.
6. Assign vLan QOS (Quality of Service) priority. 0 = Lowest and 7 = Highest
7. Pick a Trunk port (Tagged Ports). Trunk ports are typically the main connection for network traffic for each group. They are usually connected to a network switch, WAPs, etc.
8. Pick the Access port(s) (Untagged Ports) associated with the vLan. Access Ports are typically used for Cameras, etc. If programming locally, ensure your laptop or PC is connected to one of these ports.
9. Save Configuration.
10. Repeat steps 2 - 9 to add another vLan.

If unit is accidentally programmed incorrectly and you cannot get into the Netway4E series programming, physically moving ports of your PC connected to the main switch to a correct port (when being programmed remotely), or, as a last resort, completing a factory reset locally and reprogramming the unit.

11. Advanced Port Settings:

Unknown VID Packet Forwarding Configuration:

On ingress unknown VID, Forward to a fixed set of ports. By default no forwarding is set.

Configuration on Ingress Untagged Traffic:

Trunk Port action for ingress UNTAGGED packets. By default do not drop packets.

Keep Tag on Egress:

Select if you want ACCESS Port to keep the vLan tag when sending egress packets.

By default tags are stripped.


Preferred VLAN Forwarding:

For ACCESS Ports that belong to more than one vLan. Select preferred vLan to forward UNTAGGED ingress packets. By default preferred vLan is the last vLan created.

Factory Reset Option:


1. Power the unit down. Allow approximately 30 seconds for the unit to power down completely.
2. Depress **Master Reset** button on Netway4EB while reapplying power to the unit (Fig. 3a, pg. 5, Fig. 4, pg. 7). Continue holding the button until the LEDs on board go through the start up cycle, then release the button.
3. The unit returns to the original factory settings.

Fig. 4

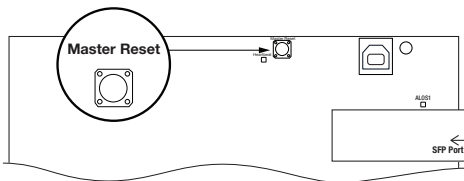

Typical Vlan Setup:

Fig. 5

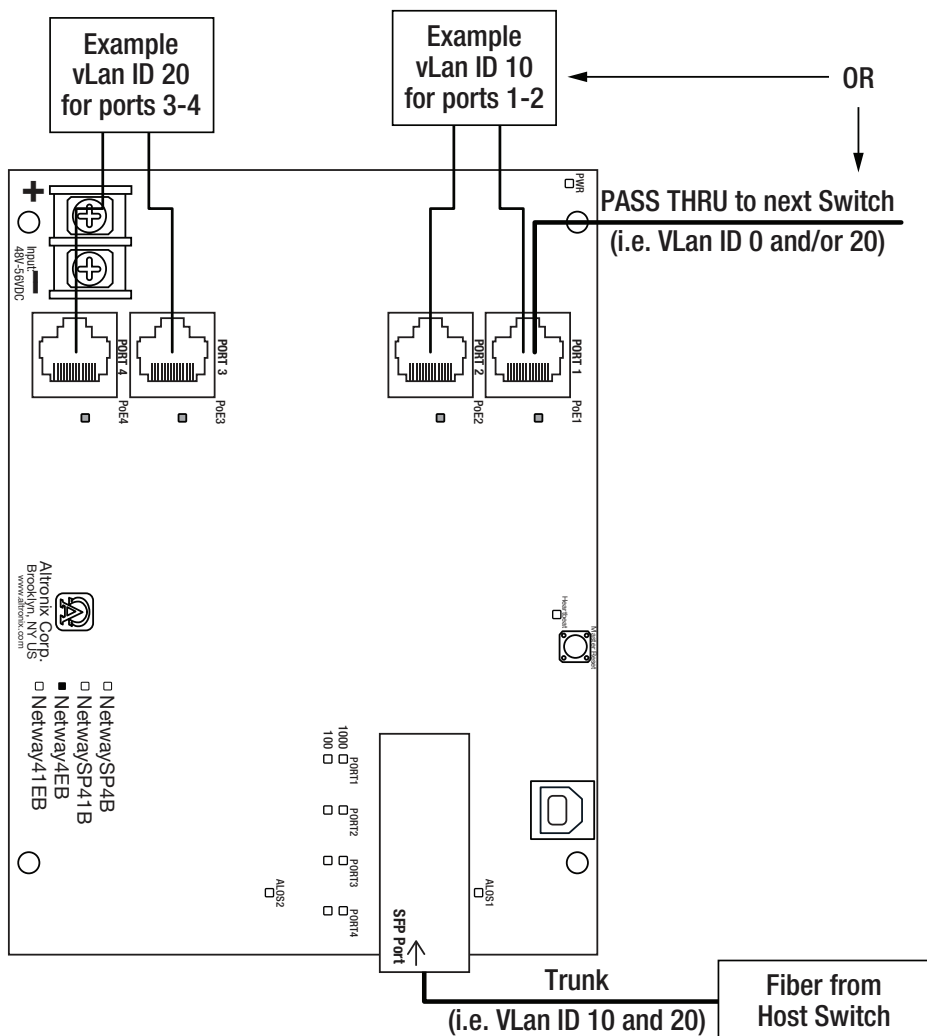


Any Ethernet port can be used for Vlan Pass Thru

Wall Mount Installation

1. Place unit at desired location and secure with mounting screws *(not included)* (Fig. 6, pg. 8).

Fig. 6

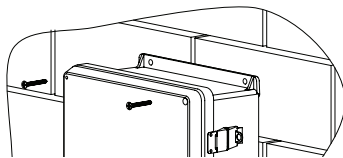

Pole Mounting Using Optional Pole Mount Kit PMK1 (NetWay4EWP) or PMK2 (NetWay4EWPX):

This installation should be made by qualified service personnel. This product contains no serviceable parts. PMK1 and PMK2 outdoor pole mount kits are designed to simplify the installation of Altronix outdoor rated power supplies and accessories housed in models WP2, WP3 and WP4 NEMA rated enclosures. PMK1 and PMK2 can be mounted on 2" to 8" (50.8mm to 203.2mm) diameter round or 5" (127mm) square poles. Brackets are designed for use with the Wormgear Quick Release Straps (two included).

1. Thread one (1) wormgear quick release strap through the slots on the back of a mounting bracket (Fig. 7, pg. 8).
2. Once the desired height of the top Pole Mount bracket is achieved, tighten the straps down by sliding open end of the strap through the locking mechanism on the strap, then tighten the screw with flat head screwdriver or 5/16" hex socket driver (Fig. 7, pg. 8 and Fig. 10, pg. 8).

Fig. 7

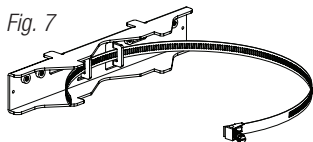


Fig. 8


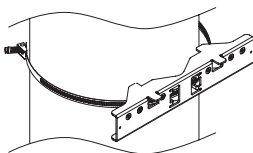


Fig. 9

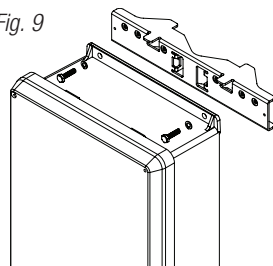

3. Attach the bottom bracket to the enclosure by inserting bolts through the flange of the enclosure and into the bracket, tightening bolts with a 7/16" hex socket (Fig. 9, pg. 8).
4. Thread the second wormgear quick release strap through the slots on the back of the bottom mounting bracket (Fig. 7, pg. 8).
5. Mount enclosure onto the top bracket by inserting bolts through flange of the enclosure and into the bracket, tightening bolts with a 7/16" hex socket (Fig. 9, pg. 8).
6. Tighten the straps of the bottom bracket down by sliding the open end of the strap through the locking mechanism on the strap, then tighten screw with flat head screwdriver or 5/16" hex socket driver (Fig. 8, pg. 8).
7. Clip excess straps.

Fig. 10

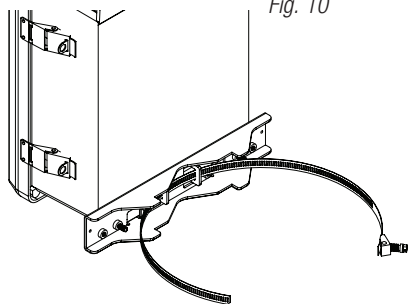


Fig. 11
2" to 8" (50.8mm to 203.2mm)
diameter round pole


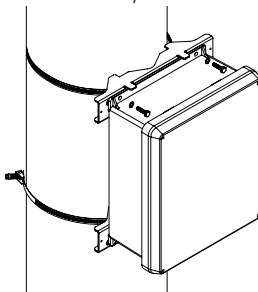







Fig. 11a
5" (127mm) square pole

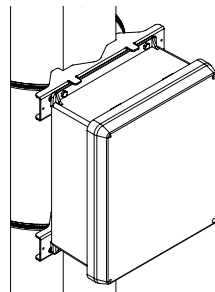


NetWay4ELX

Mechanical Drawing and Dimensions (H x W x D approx.):

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm)

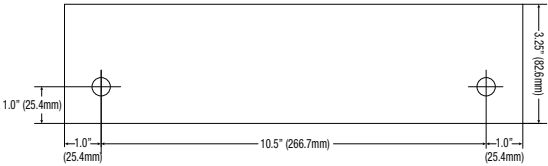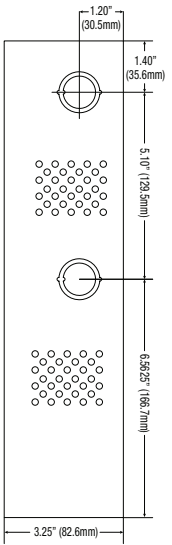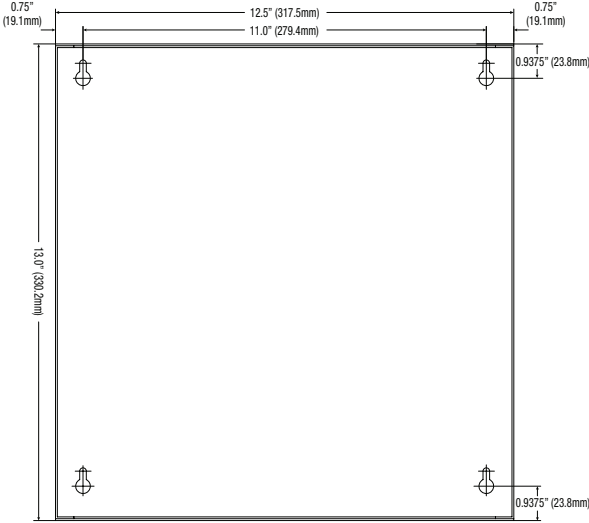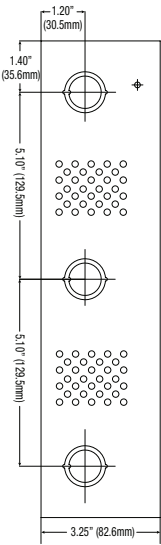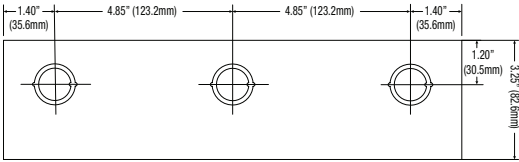


NetWay4ELPL
Mechanical Drawing and Dimensions (H x W x D approx.):
10.75" x 8.875" x 2.375" (273.1mm x 225.4mm x 60.3mm)

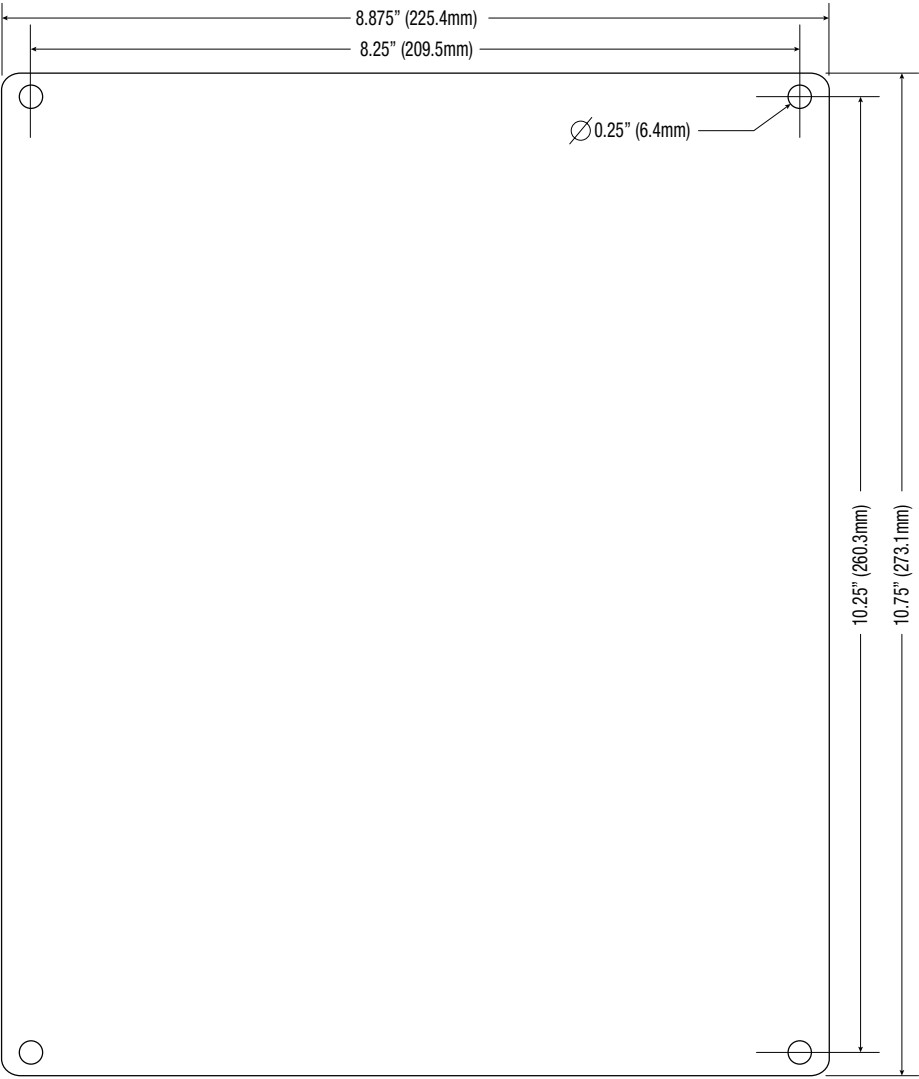


NetWay4ELWP **Mechanical Drawing and Dimensions (H x W x D approx.):** 13.31" x 11.31" x 5.59" (338.1mm x 287.3mm x 142mm)


FRONT VIEW

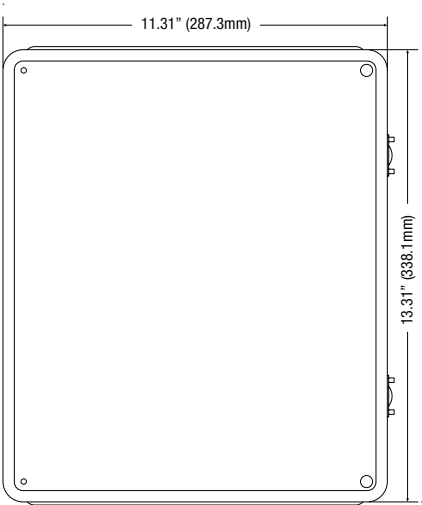


RIGHT SIDE VIEW

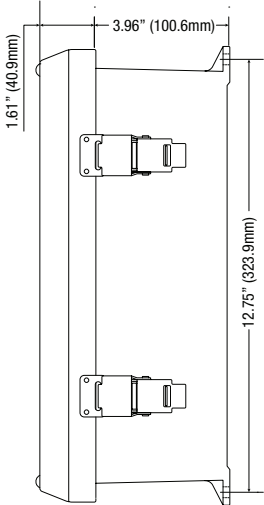

FRONT VIEW COVER REMOVED

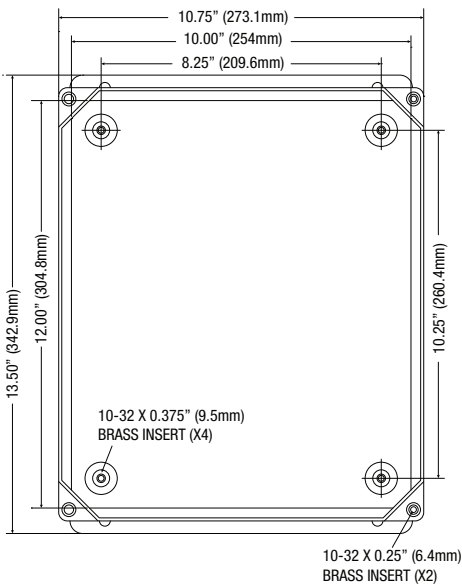

END VIEW

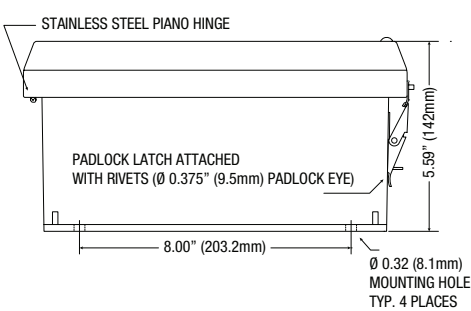


NetWay4ELWPX


Mechanical Drawing and Dimensions (H x W x D approx.):

17.53" x 15.3" x 6.67" (445.3mm x 388.6mm x 169.4mm)

FRONT VIEW

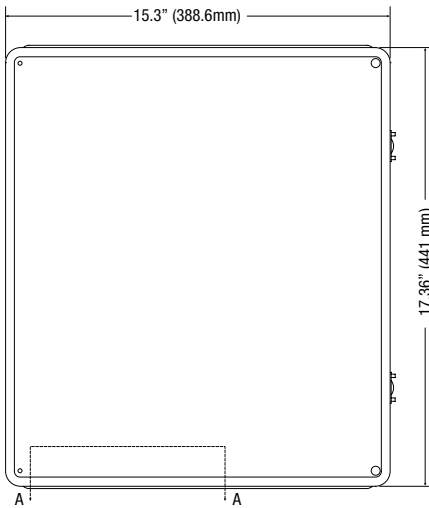


RIGHT SIDE VIEW

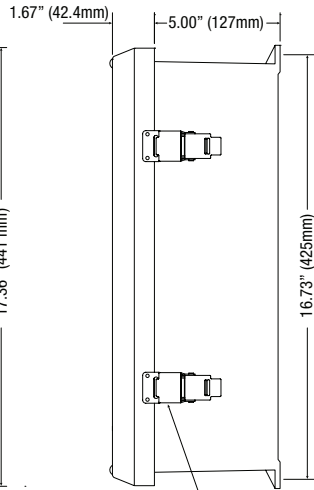


316 STAINLESS STEEL PADLOCK LATCH
ATTACHED WITH RIVETS. Ø 0.375 PADLOCK EYE


FRONT VIEW COVER REMOVED

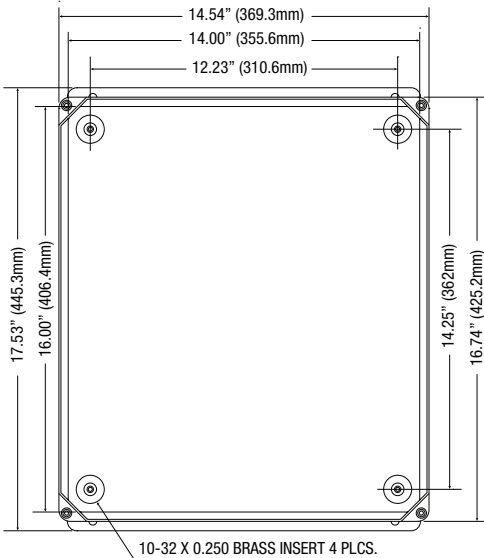

SECTION A-A

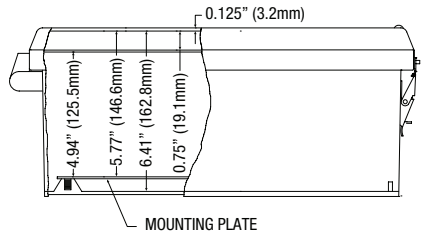

END VIEW

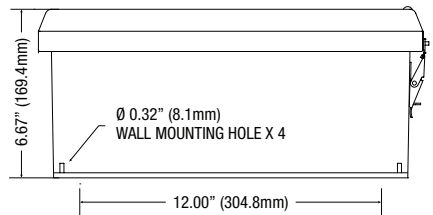

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
IINetWay4EL Series H29Y

