



Please be sure to visit
altronix.com for
latest firmware and
installation instructions

Network Power Distribution Module

Installation and Programming Manual

Models include:

LINQ8PD

- *Network Power Distribution Module*
- *Eight (8) Fused Outputs*

LINQ8PDCB

- *Network Power Distribution Module*
- *Eight (8) PTC Outputs*



Table of Contents:

Overview	<i>pg.</i> 3
Features	<i>pg.</i> 3
Terminal/Connector Identification	<i>pg.</i> 4
LED Diagnostics	<i>pg.</i> 5
Installation Instructions	<i>pg.</i> 5
Network Setup	
Altronix Dashboard USB Connection	<i>pg.</i> 6
Browser Setup	<i>pg.</i> 7

Overview:

Altronix LINQ8PD(CB) network power distribution module facilitates monitoring, reporting, and control of one (1) or two (2) low voltage AC or supervised DC power supply/chargers over the network. It reports diagnostics via Email and Windows Dashboard Alert notifications, greatly reducing system downtime and eliminating unnecessary service calls. LINQ8PD(CB) retrofits with most currently installed multi-output power supply/chargers.

Specifications:

Input Power:

- Input1/Input2: 12VAC-28VAC @ 12.5A each or 12VDC/28VDC @ 12.5A each.
Note: Do not connect AC and DC simultaneously to INP1 and INP2.

Outputs:

- Eight (8) fused or PTC protected outputs:
 - LINQ8PD: Blade fuses are rated 3A.
 - LINQ8PDCB: PTCs are rated 2.5A.
- Power output(s) can be locally or remotely controlled.
- Surge suppression.

Status Monitoring:

- Power Supply(ies) output voltage and load.
- Voltage and load of each output.
- FACP trigger and reset status.
- Unit temperature (Celsius).
- Power Supply AC and Battery status.
- Battery health.

Programming Features:

- Power Supply(ies) voltage and load limits (High/Low).
- FACP trigger type (wet or dry - N.O./N.C.).
- Input Function (FACP reset/tamper).
- Output Reset Trigger (N.O./N.C.).
- Battery Monitor Configuration:
 - Capacity
 - Charge Level
 - Max. Charge and Discharge Current
 - Service Date
- Configurable Output Relay(s).
- Individual Output Configuration:
 - Device ID
 - Voltage and Current Limits (High/Low)
 - FACP Trigger Setting (latching/non-latching/inactive)
 - Battery Backup.

Network Security:

- Secure Socket Layer (SSL).

Reporting:

- Windows Dashboard Alert notifications.
- Email notifications.
- Event Log tracks history.

Fire Alarm Interface:

- Supervised FACP disconnect (Latching or Non-Latching).
- FACP reset (N.C. or N.O.).

Environmental:


- Operating temperature:
 - 20°C to 49°C (-4°F to 120.2°F).
- Storage temperature:
 - 30°C to 70°C (-22°F to 158°F).

Mechanical:

- Board Dimensions (L x W x H):
5.5" x 3.625" x 0.96"
(139.7mm x 92.1mm x 24.4mm)
- Product weight (approx.): 0.4 lbs. (0.18kg).
- Shipping weight (approx.): 0.7 lbs. (0.32kg).

Terminal/Connector Identification:

LINQ8PD - Fig. 1

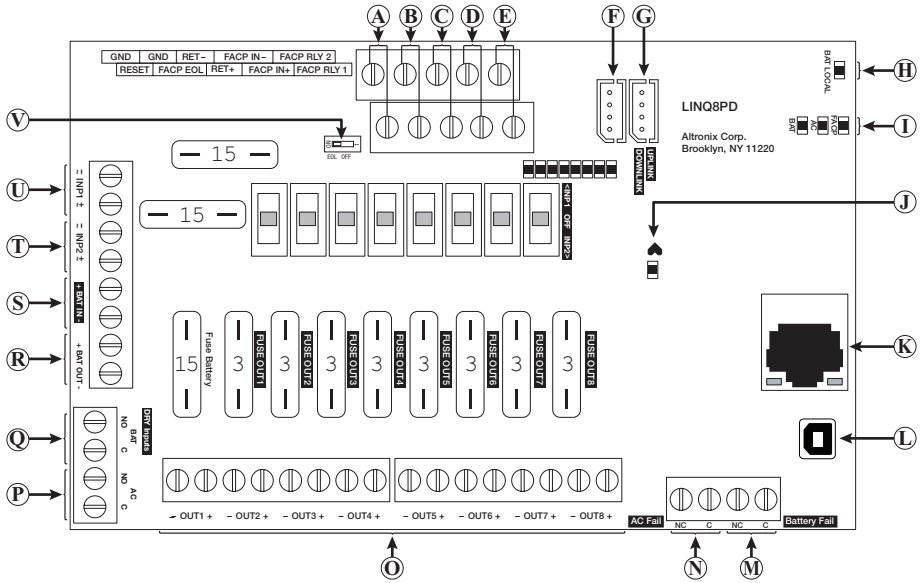

Terminal/Legend	Description
A	GND, RESET FACP reset.
B	GND, FACP EOL Connects to EOL or next LINQ8PD(CB).
C	+ RET - FACP EOL or next LINQ8PD(CB).
D	FACP - IN + Wet input from FACP +.
E	FACP RLY 1, 2 FACP reporting relay.
F	Downlink Connection to power supply or second LINQ8PD(CB) module.
G	Uplink Connects to next LINQ8PD(CB) upstream from this module. If this is the first LINQ8PD(CB) in the daisy chain, this connector is not used.
H	BAT Local LED Indicates battery(ies) thresholds.
I	FACP/AC/BAT LEDs Indicates status of FACP, AC and Battery.
J	Heartbeat LED Indicates the LINQ8PD(CB) is operational.
K	RJ45 Ethernet: LAN or laptop connection enables LINQ8PD(CB) programming and status monitoring.
L	USB Laptop connection enables LINQ8PD(CB) initial setup and programming.
M	Battery Fail NC, C, NO Indicates low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1A @ 30VDC.
N	AC Fail NC, C, NO Indicates loss of AC power, e.g. connect to audible device or alarm panel. Relay normally energized when AC power is present. Contact rating 1A @ 30VDC (power-limited).
O	+ OUT1 - to + OUT8 - 24VAC/28VAC or 12VDC/24VDC continuous output.
P	AC / NO, C Connection to [AC Fail] terminals on power supply.
Q	BAT / NO, C Connection to [BAT Fail] terminals on power supply.
R	+ BAT OUT - Connection to stand-by batteries.
S	+ BAT IN - Connection to [+ BAT -] terminals on power supply.
T	- INP2 + Second AC or DC power supply input. Note: Do not connect AC and DC simultaneously to INP1 and INP2.
U	- INP1 + First AC or DC power supply input. Note: Do not connect AC and DC simultaneously to INP1 and INP2.
V	EOL OFF Built-in EOL Resistor ON/OFF Switch.

LED Diagnostics:

LED	Flash Codes	Description
BAT LOCAL	ON	Charge/Discharge current working properly
	Blinking	Charge/Discharge current on the battery exceed limits
FACP	ON	FACP triggered
	OFF	FACP released
AC	ON	Input signal active
	OFF	Input signal inactive
BAT	ON	Input signal active
	OFF	Input signal inactive
OUT1-OUT8	ON	Output is ON and working properly
	OFF	Output is OFF
	Blinking	Output is ON and voltage and/or current exceeds limits

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/NFPA 72/ANSI, and with all local codes and authorities having jurisdiction.

Product is intended for indoor use only and should be installed by qualified personnel.

1. Disconnect the AC mains and batteries (if used) from the power supply(ies) before connecting the LINQ8PD(CB).
2. Mount LINQ8PD(CB) into position and secure with mounting screws.
Interconnecting two (2) LINQ8PD(CB) modules: Two (2) LINQ8PD(CB)s can be interconnected to enable both units to be accessed from a single IP address. Connect interface cable (supplied) to the interface port marked [DOWNLINK] of first LINQ8PD(CB) which will be the master to interface port marked [UPLINK] of second LINQ8PD(CB).
3. **Power Supply Input Connection:** The LINQ8PD(CB) can be connected to two independent AC or DC power supplies that can be routed through each of the individual outputs. Each output is equipped with an input selection switch that is used to route the desired input to the output. This switch also has a center OFF position that can be used to turn power off to an output.
 - (a) **Single Power Supply Input:** Connect the output of the power supply to the terminals marked [+ INP1 -] and set the Input selection switch for each output to the [INP1] position.
 - (b) **Dual Power Supply Inputs:** When the use of two independent power supplies is desired connect one power supply to the terminals marked [+ INP1 -] and the second power supply to the terminals marked [+ INP2 -]. Set the Input selection switch for each output to the appropriate position. Reconnect the AC mains of the connected power supply(ies) and verify the voltage of each of the eight outputs. This helps avoiding potential damage. Disconnect the AC mains of the connected power supply(ies).
Note: Do not connect AC and DC simultaneously to INP1 and INP2.
4. **Output Connections:** Connect devices to be powered to the terminals marked [- OUT1 +] to [- OUT8 +] on LINQ8PD(CB) carefully observing polarity. When two power supplies are connected to the LINQ8PD(CB) verify that the output voltage matches the operating voltage of the connected devices.
5. **Battery Connections:**
 Skip this step when connecting AC power supplies or DC power supply(ies) without batteries. Connect the power supplies battery charging circuit to the terminals marked [+ BAT IN -], connect the battery leads to the terminals marked [+ BAT OUT -].
Note: Do not connect battery(ies) until all connections have been made.
 For 24VDC operation connect two 12VDC batteries in series using the supplied yellow battery jumper. For Access Control applications batteries are optional. When batteries are not used, a loss of AC will result in the loss of output voltage. When the use of stand-by batteries is desired, they must be lead acid or gel type.
6. **Battery and AC Supervision Connections:** Skip this step when connecting AC power supplies. These connections are required to monitor AC and Battery Trouble conditions. These conditions cannot be monitored when connected to a non-supervised power supply. Connect the common (C) and normally open (N.O.) contact of the power supplies AC and Battery supervision relay to the corresponding DRY Inputs of the LINQ8PD(CB). If required, connect supervisory trouble reporting devices to outputs marked [AC Fail], [BATTERY Fail] and supervisory relay outputs marked [NC] and [C] to appropriate notification devices. Use 22 AWG to 18 AWG for supervision reporting.

7. **Fire Alarm Interface options:** (not evaluated by UL).

The Fire Alarm Interface and Reset options are programmable via the web interface.

FAI input trigger options: supervised normally closed [NC], normally open [NO], polarity reversal input from signaling circuit or wet input will trigger selected outputs.

- (a) **Normally Open [NO] input:** Connect the supplied 2.2k resistor in parallel with the normally open trigger circuit to the terminals marked [GND], [FACP EOL].
- (b) **Normally Closed [NC] input:** Connect the supplied 2.2k resistor in series with the normally closed trigger circuit to the terminals marked [GND], [FACP EOL].
- (c) **Signaling Circuit/Wet input trigger:** Connect the positive (+) and negative (-) of the signaling circuit/wet input trigger to the terminals marked [FACP IN +] and [FACP IN -].
- (d) **Fire Alarm Reset:** If a output is programmed to latch with manual reset, connect either a normally open (N.O.) or normally closed (N.C.) dry input to the terminals marked [RESET] and [GND].

When daisy-chaining fire alarm signals, connect [FACR RLY1] and [FACP RLY2] on the first LINQ8PD to [GND] and [FACP EOL] of the next board and slide EOL switch to OFF. If dry contact is used, slide EOL switch to ON.

8. Reconnect AC power mains to the connected power supply(ies) and connect back-up batteries.

Please be sure to visit altronix.com for latest firmware and installation instructions.

Network Setup: Altronix Dashboard USB Connection:

The USB connection on the LINQ8PD(CB) is used for Network. When connected to a PC via the USB cable the LINQ8PD(CB) will receive power from the USB port allowing programming of the LINQ8PD(CB) prior to being connected to the power supply.

- 1. Install the software supplied with the LINQ8PD(CB) on the PC being used for programming. This software should be installed on all computers that will have access to the LINQ8PD(CB).
- 2. Connect the supplied USB cable to the USB port on the LINQ8PD(CB) and the computer.
- 3. Double click on the **Dashboard icon** on the desktop of the computer and open the Dashboard.
- 4. Click on the button marked **USB Network Setup** in the upper hand side of the dashboard. This will open the USB Network Setup screen. In this screen the MAC Address of the LINQ8PD(CB) module will be found along with the Network Settings and Email Settings.

Network Settings:

In the IP Address Method field select the method by which the IP Address for the LINQ8PD(CB) will be obtained: “**STATIC**” or “**DHCP**”, then follow the appropriate steps.

STATIC:

- a. **IP Address:** Enter the IP address assigned to the LINQ8PD(CB) by the network administrator.
- b. **Subnet Mask:** Enter the Subnet of the network.
- c. **Gateway:** Enter the TCP/IP gateway of the network access point (router) being used. **Note:** Gateway configuration is required to properly receive emails from the device.
- d. **Inbound Port (HTTP):** Enter the port number assigned to the LINQ8PD(CB) module by the network administrator to allow remote access and monitoring.
- e. Click the button labeled **Submit Network Settings**. A dialog box will display “New network settings will take effect after the server is rebooted”. Click **OK**.

DHCP:

Connect LINQ8PD(CB) to the DHCP router to obtain IP address.

- a. After selecting DHCP in the IP Address Method field click the button labeled **Submit Network Settings**. A dialog box will display “New network settings will take effect after the server is rebooted”. Click **OK**. Next, click on the button labeled **Reboot Server**. After the LINQ8PD(CB) reboots the IP address assigned will appear in the IP Address field. It is recommended to have the assigned IP Address reserved on the router to ensure continued access to the LINQ8PD(CB) (*see the network administrator*).
- b. **Subnet Mask:** When operating in DHCP the router will assign the subnet mask values.
- c. **Gateway:** Enter the TCP/IP gateway of the network access point (router) being used.
- d. **Inbound Port (HTTP):** Enter the port number assigned to the LINQ8PD(CB) module by the network administrator to allow remote access and monitoring. The default inbound port setting is 80.
- e. Click the button labeled **Submit Network Settings**. A dialog box will display “New network settings will take effect after the server is rebooted”. Click **OK**.

After all information has been entered click on the button labeled **Reboot Server**.

A dialog box will display “Please allow up to 30 seconds for the server to reboot”. Click **OK**.

After the LINQ8PD(CB) has been rebooted all programmed information will be saved. Disconnect the USB cable from the LINQ8PD(CB) module. If the LINQ8PD(CB) has not been connected to the eFlow power supply(ies) being monitored, refer to *Installing LINQ8PD(CB) Board* on page 2 of these instructions. Connect one end of the network cable to the network jack on the LINQ8PD(CB) and the other to the network connection or the PC to be used for programming.

Note: Email notification must be setup via the Browser, refer to Email Settings in the Browser Setup section of this manual.

Browser Setup:

When not using the Altronix Dashboard USB connection for the initial Network setup the LINQ8PD(CB) needs to be connected to any DC power supply(ies) or eFlow power supply(ies) being monitored (*refer to Installing LINQ8PD(CB) Board on page 2 of these instructions*) prior to programing.

Factory Default settings

- IP Address: 192.168.168.168
- User Name: admin
- Password: admin

1. Set the static IP address for the laptop to be used for programming to the same network IP address as the LINQ8PD(CB), i.e. 192.168.168.200 (default address of the LINQ8PD(CB) is 192.168.168.168).
2. Connect one end of the network cable to the network jack on the LINQ8PD(CB) and the other to the network connection of the laptop.
3. Open a browser on the computer and enter “192.168.168.168” into the address bar.
A dialog box **Authentication Required** will appear requesting both user name and password.
Enter the default values here. Click on the button labeled **Log In**.
4. The status page of the LINQ8PD(CB) will appear. This page displays the real time status and health of each power supply connected to the LINQ8PD(CB).

Notes:

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty | Made in U.S.A.

HLINQ8PD

G20R

- 8 -



MEMBER

LINQ8PD / LINQ8PDCB