

Access & Power Integration

Altronix/Mercury Wired Networked Kits

Models Include:

T2M3CK1AQ

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) LINQ8ACM - Networked Fused Access Power Controller
- One (1) PDS16 - Dual Input Fused Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch
- Wire harnesses for one (1) LP1502 and three (3) MR52

T2M3CK1ADQ

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) LINQ8ACMCB - Networked PTC Access Power Controller
- One (1) PDS16CB - Dual Input PTC Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch
- Wire harnesses for one (1) LP1502 and three (3) MR52

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. 032124



More than just power.™

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix T2M3CK1A(D)Q Trove Mercury kit is pre-assembled and consists of Trove enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. It also accommodates a variety of Mercury modules for up to eight doors in a single enclosure.

Configuration Chart:

Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage Range (VDC)		Maximum Supply Current for Main Outputs on Power Supply board and LINQ8ACM(CB) Access Power Controllers' outputs	Fail-Safe/ Fail-Secure or Dry Form "C" Outputs	Current Per LINQ8ACM(CB) and PDS16(CB) Output (A)	LINQ8ACM(CB) and PDS16(CB) Board Input Fuse (PTC) Rating	LINQ8ACM(CB) and PDS16(CB) Board Output Fuse (PTC) Rating
				[DC]	[Aux]					
T2M3CK1AQ	3.5	5A/ 250V	15A/ 32V	20.19-	20.19-	24VDC @ 5.8A	8	2.5	15A/ 32V	3A/ 32V
T2M3CK1ADQ				26.4	26.4					

Installation Instructions:


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Connect unswitched AC power (120VAC 60Hz) to RSB1. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on. This light can be seen through the LED lens on the door of the enclosure.




Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.
CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.
Refer installation and servicing to qualified service personnel.

5. Measure voltage before connecting devices. This helps avoiding potential damage
6. Mount Mercury modules to backplane(s), refer to *page 3*.
7. Refer to the *eFlowNB Power Supply/Charger Installation Guide* for eFlow6NB and corresponding *Installation Guides* for LINQ8ACM(CB) and PDS16(CB) for further installation instructions.

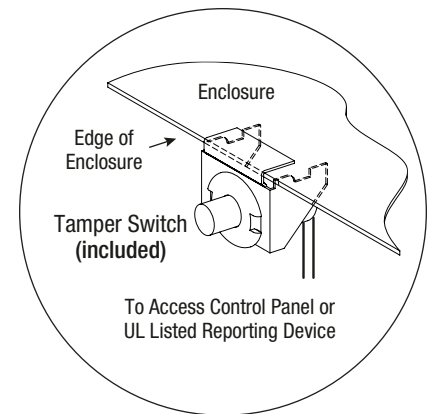Fig. 1



Hardware:

 Snap On Spacer |
  5/16" Pan Head Screw |
  Lock Nut

T2M3CK1A(D)Q: Configuration of Mercury Boards on TM2 Backplane:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2, pg. 3).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

LenelS2 / Mercury Access Controller	Pem Mounting
LP1502	(A)
MR52	(B)

Fig. 2



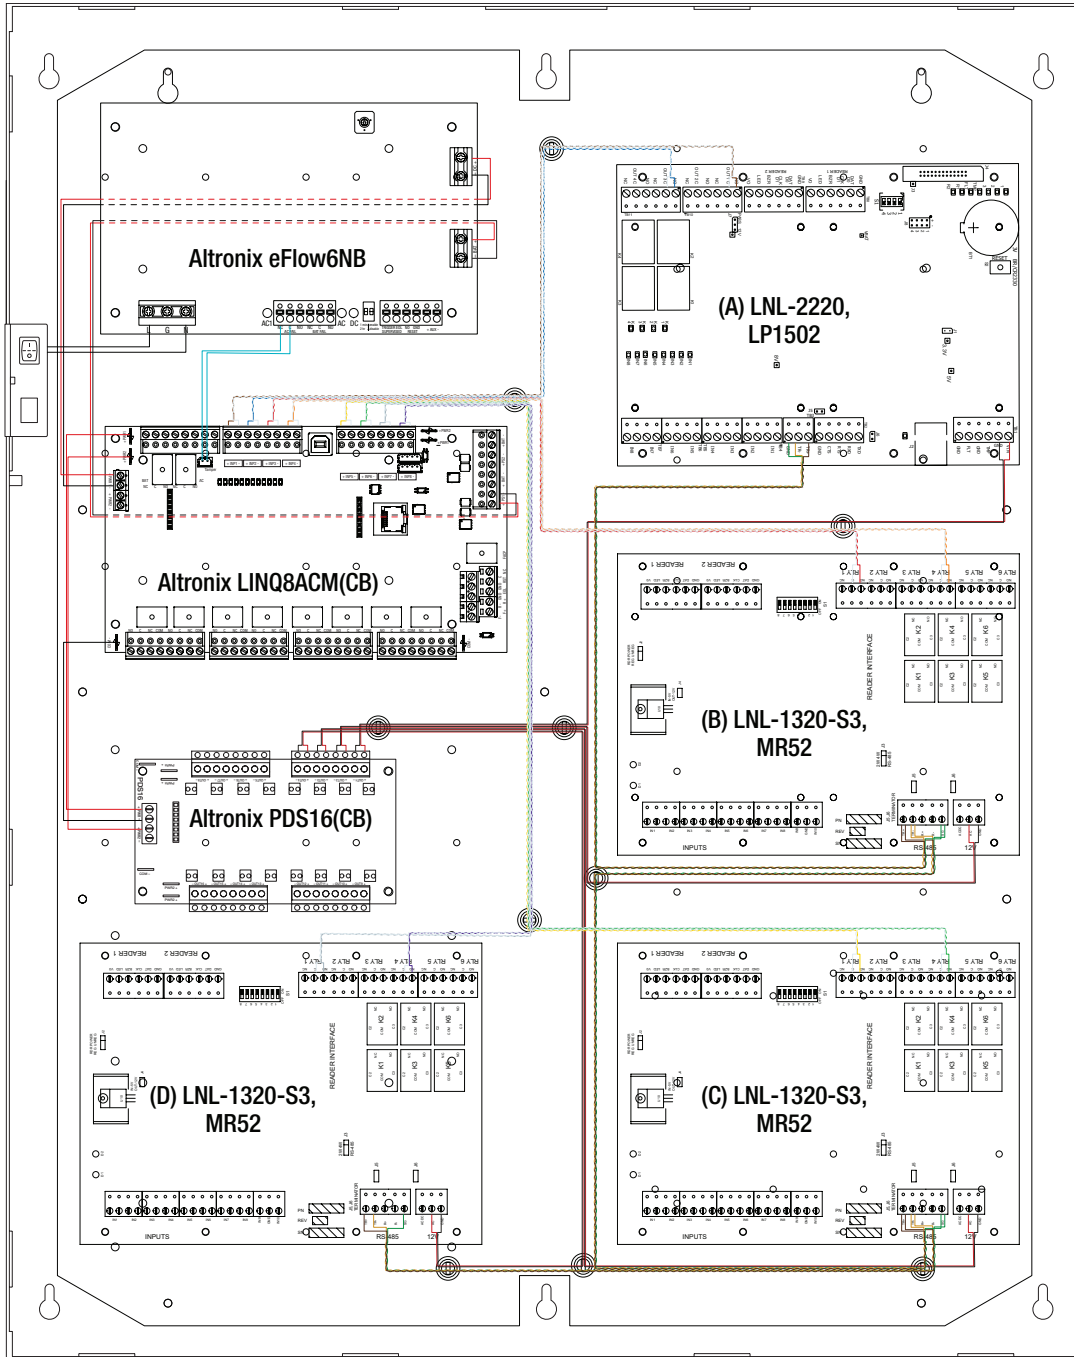


Fig. 2a

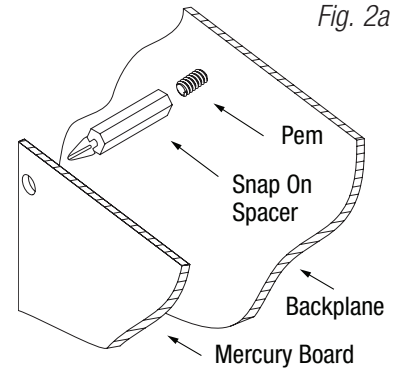

Trove2 Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

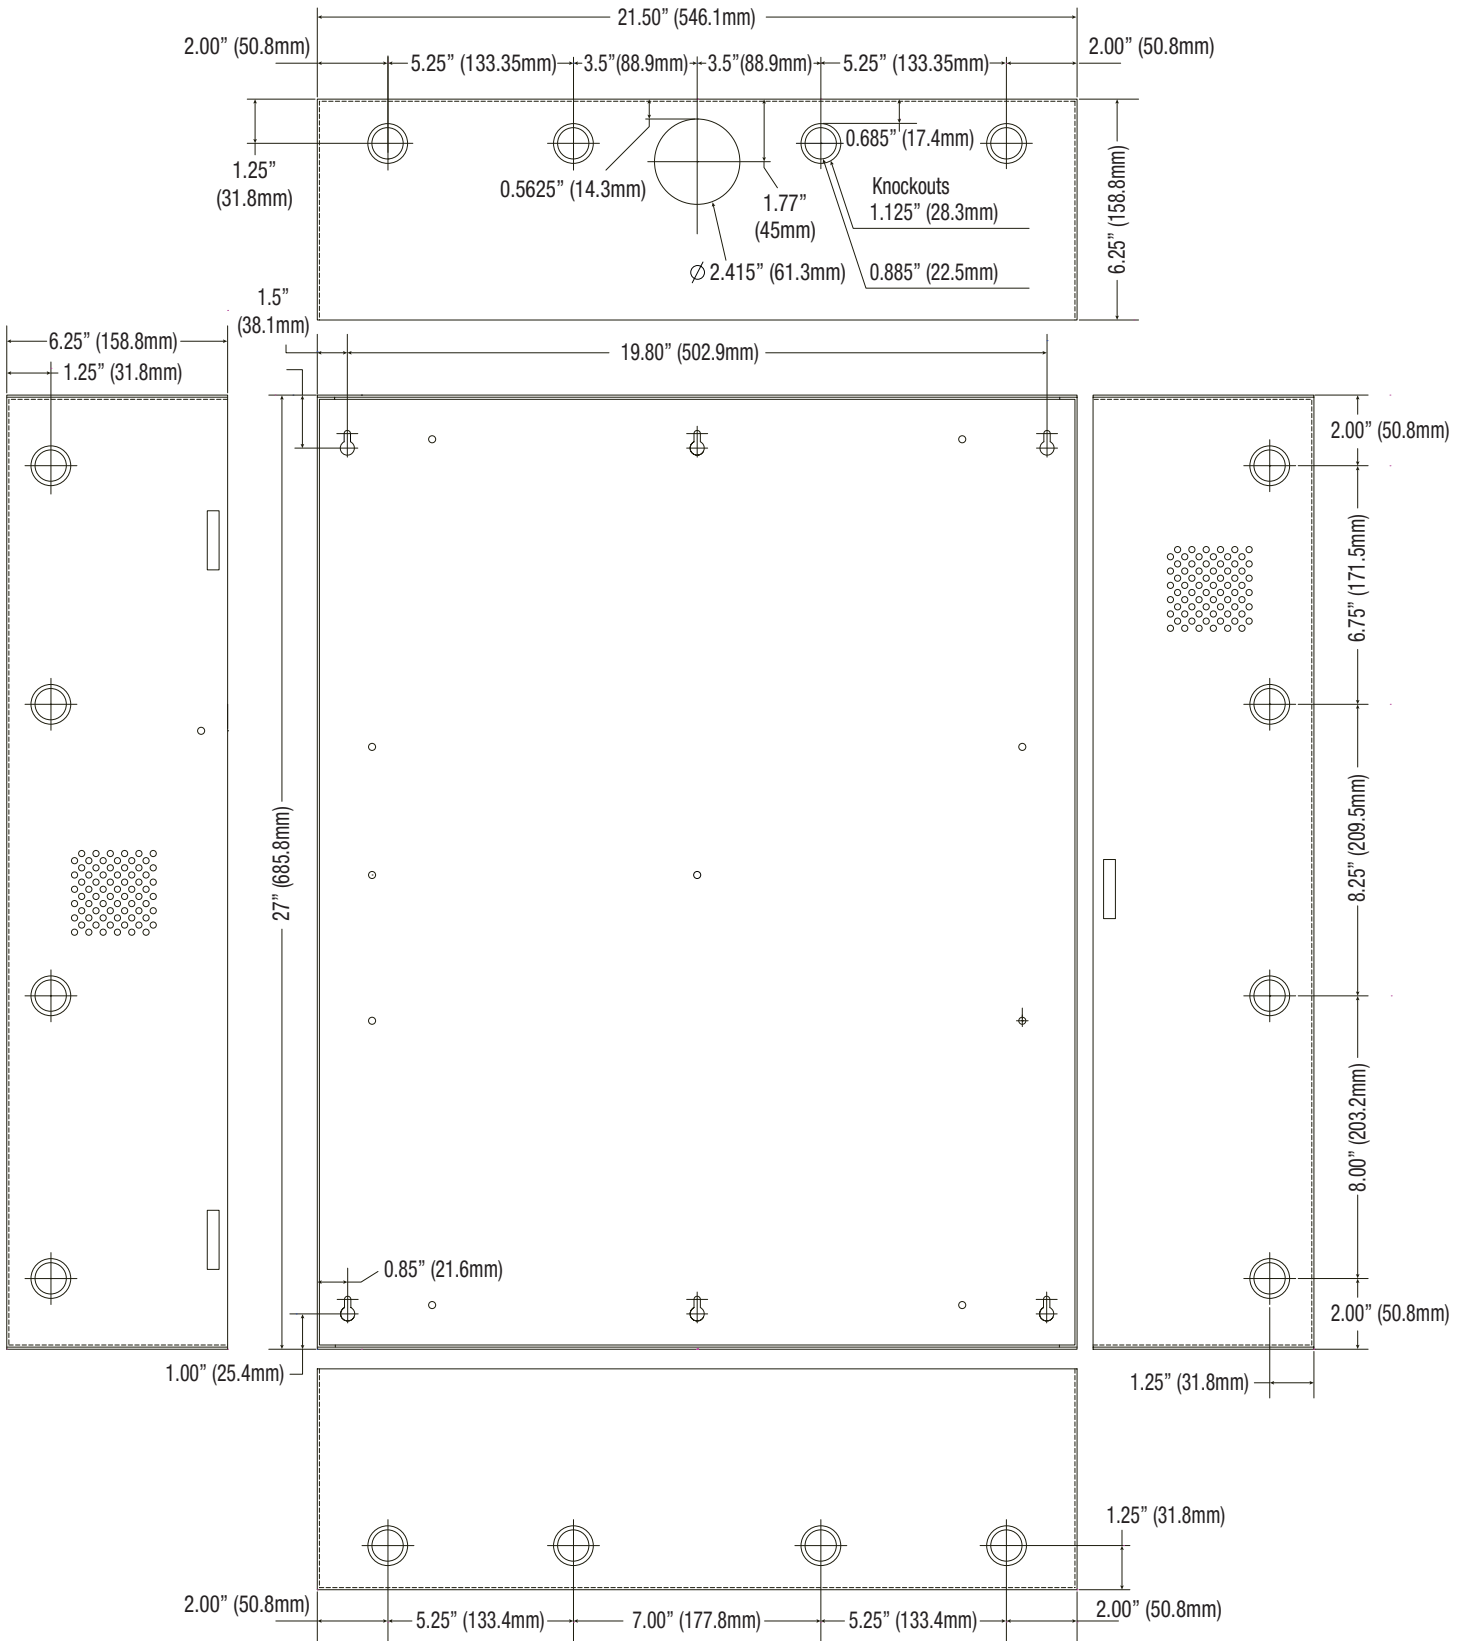

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIT2M3CK1A(D)Q

C21X

