

TRIVE™

Access & Power Integration

Altronix/Software House Networked Kits

Models Include:

T2SH7F8PQ

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSH2 Altronix/Software House backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8 - Dual Input Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) LINQ8PD - Networked Fused Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch

T2SH7F8PDQ

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSH2 Altronix/Software House backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8CB - Dual Input PTC Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) LINQ8PDCB - Networked PTC Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. 040825

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



More than just power.™

Overview:

Altronix Trove Software House kits are pre-assembled and consist of Trove enclosure with factory installed Altronix power supply/chargers and sub-assemblies. These kits also accommodate various combinations of Software House boards for up to eight (8) doors in a single enclosure.

Configuration Chart:

| Altronix Model Number | 120VAC 60Hz Input Current (A) | Power Supply Board Input Fuse Rating | Power Supply Board Battery Fuse Rating | Nominal DC Output Voltage | | Maximum Supply Current for Main Output on Power Supply boards, ACMS8(CB) and LINQ8PD(CB) Power Distribution Modules' outputs (A) | Current Per ACMS8(CB) and LINQ8PD(CB) Output (A) | ACMS8(CB) and LINQ8PD(CB) Board Input Fuse (PTC) Rating | ACMS8(CB) and LINQ8PD(CB) Board Output Fuse (PTC) Rating |
|-----------------------|-------------------------------|--------------------------------------|--|---------------------------|------------|--|--|---|--|
| | | | | [DC] | [Aux] | | | | |
| T2SH7F8PQ | 4.5 | 6.3A/250V | 15A/32V | 20.17-26.4 | 20.28-26.4 | 24VDC @ 9.3A | 2.5 | 15A/32V | 3A/32V |
| T2SH7F8PDQ | | | | 20.17-26.4 | 20.28-26.4 | | 2.0 | 9A | 2.5A |

Hardware and Accessories:



- One (1) tamper switch (Altronix Model TS112 or equivalent).
- Cam lock.
- Battery leads.

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Connect unswitched AC power (120VAC 60Hz) to terminals marked [L, N]. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on.

This light can be seen through the LED lens on the door of the enclosure.


Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment.

There are no user serviceable parts inside. Refer installation and servicing to qualified service personnel.

5. Measure voltage before connecting devices. This helps avoiding potential damage.
6. Mount Software House boards to backplane, *refer to page 3*.
7. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NB and corresponding *Sub-Assembly Installation Guide* for ACMS8(CB), LINQ8PD(CB) and VR6 for further installation instructions.

Fig. 1

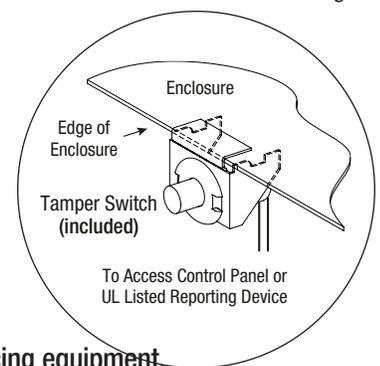

T2SH7F8P(D)Q: Configuration of Software House iSTAR Ultra ACM Boards

1. Align the Software House boards on the backplane to match the boards' mounting holes with pems provided.
2. Fasten spacers (provided) to pems that match the hole pattern for Software House iSTAR Ultra GCM, iSTAR Ultra ACM, and/or I8, R8, I8-CSI boards (Fig. 2, 2a, pg. 3).
3. Mount Software House boards to spacers utilizing provided 5/16" pan head screws (Fig. 2a, pg. 3).
Note: Software House iSTAR Ultra ACM boards have one (1) USB port each.
 Please orient the board in the appropriate position according to the Fig. 2 below.
4. Fasten backplane to Trove2 enclosure utilizing lock nuts (provided).

Fig. 2



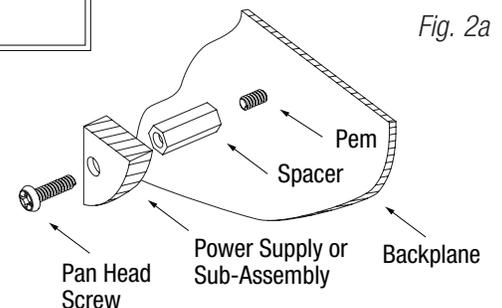


Fig. 2a

Enclosure Dimensions (H x W x D approximate):
 27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

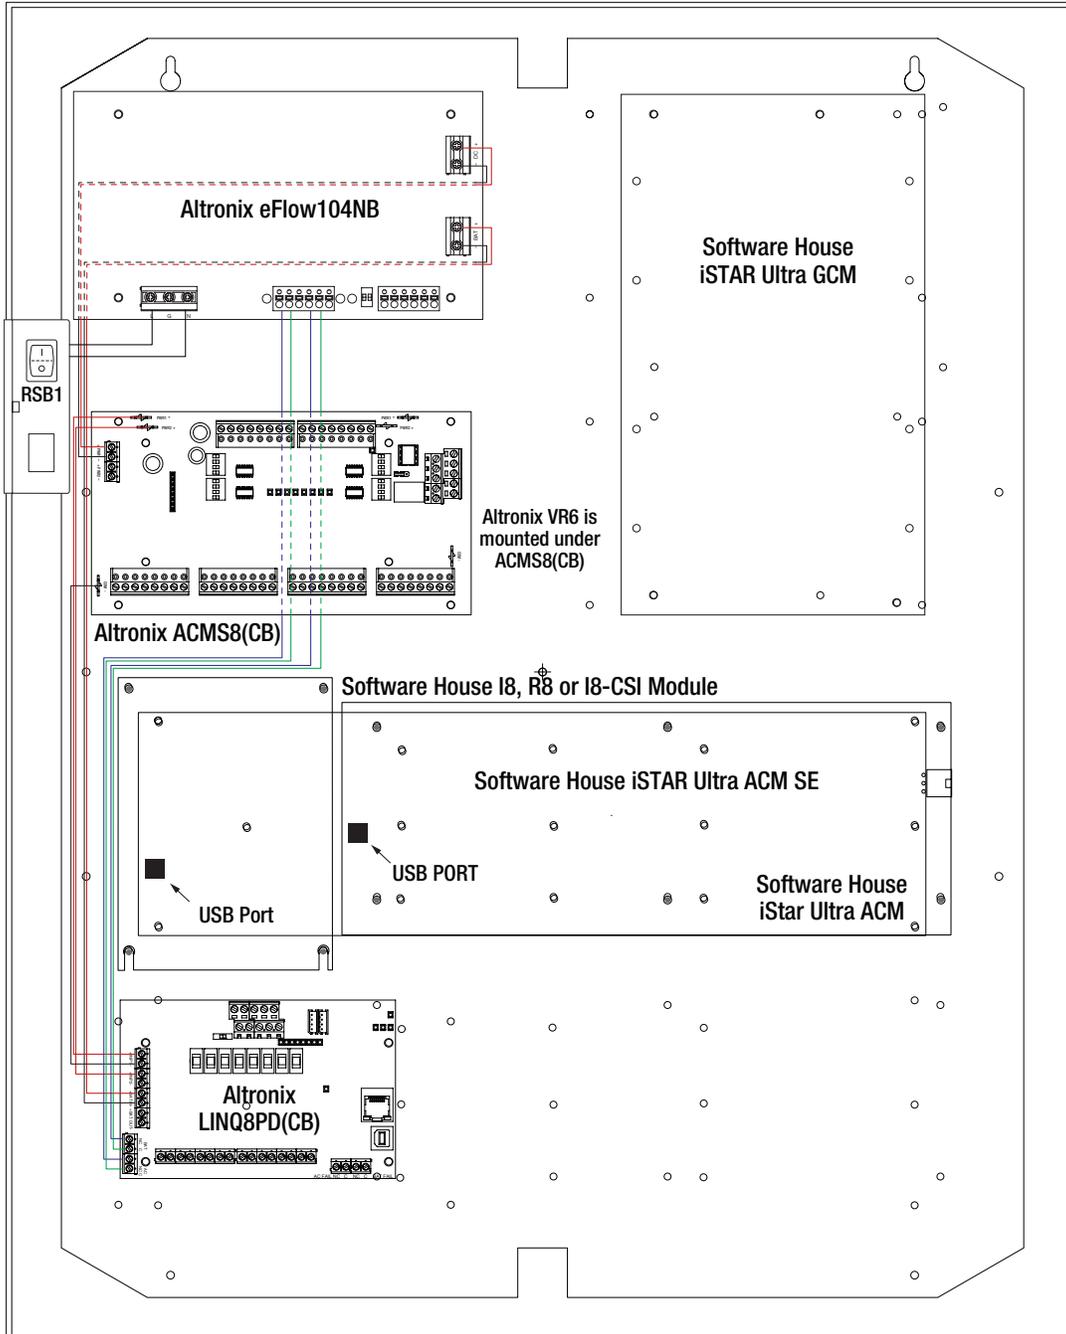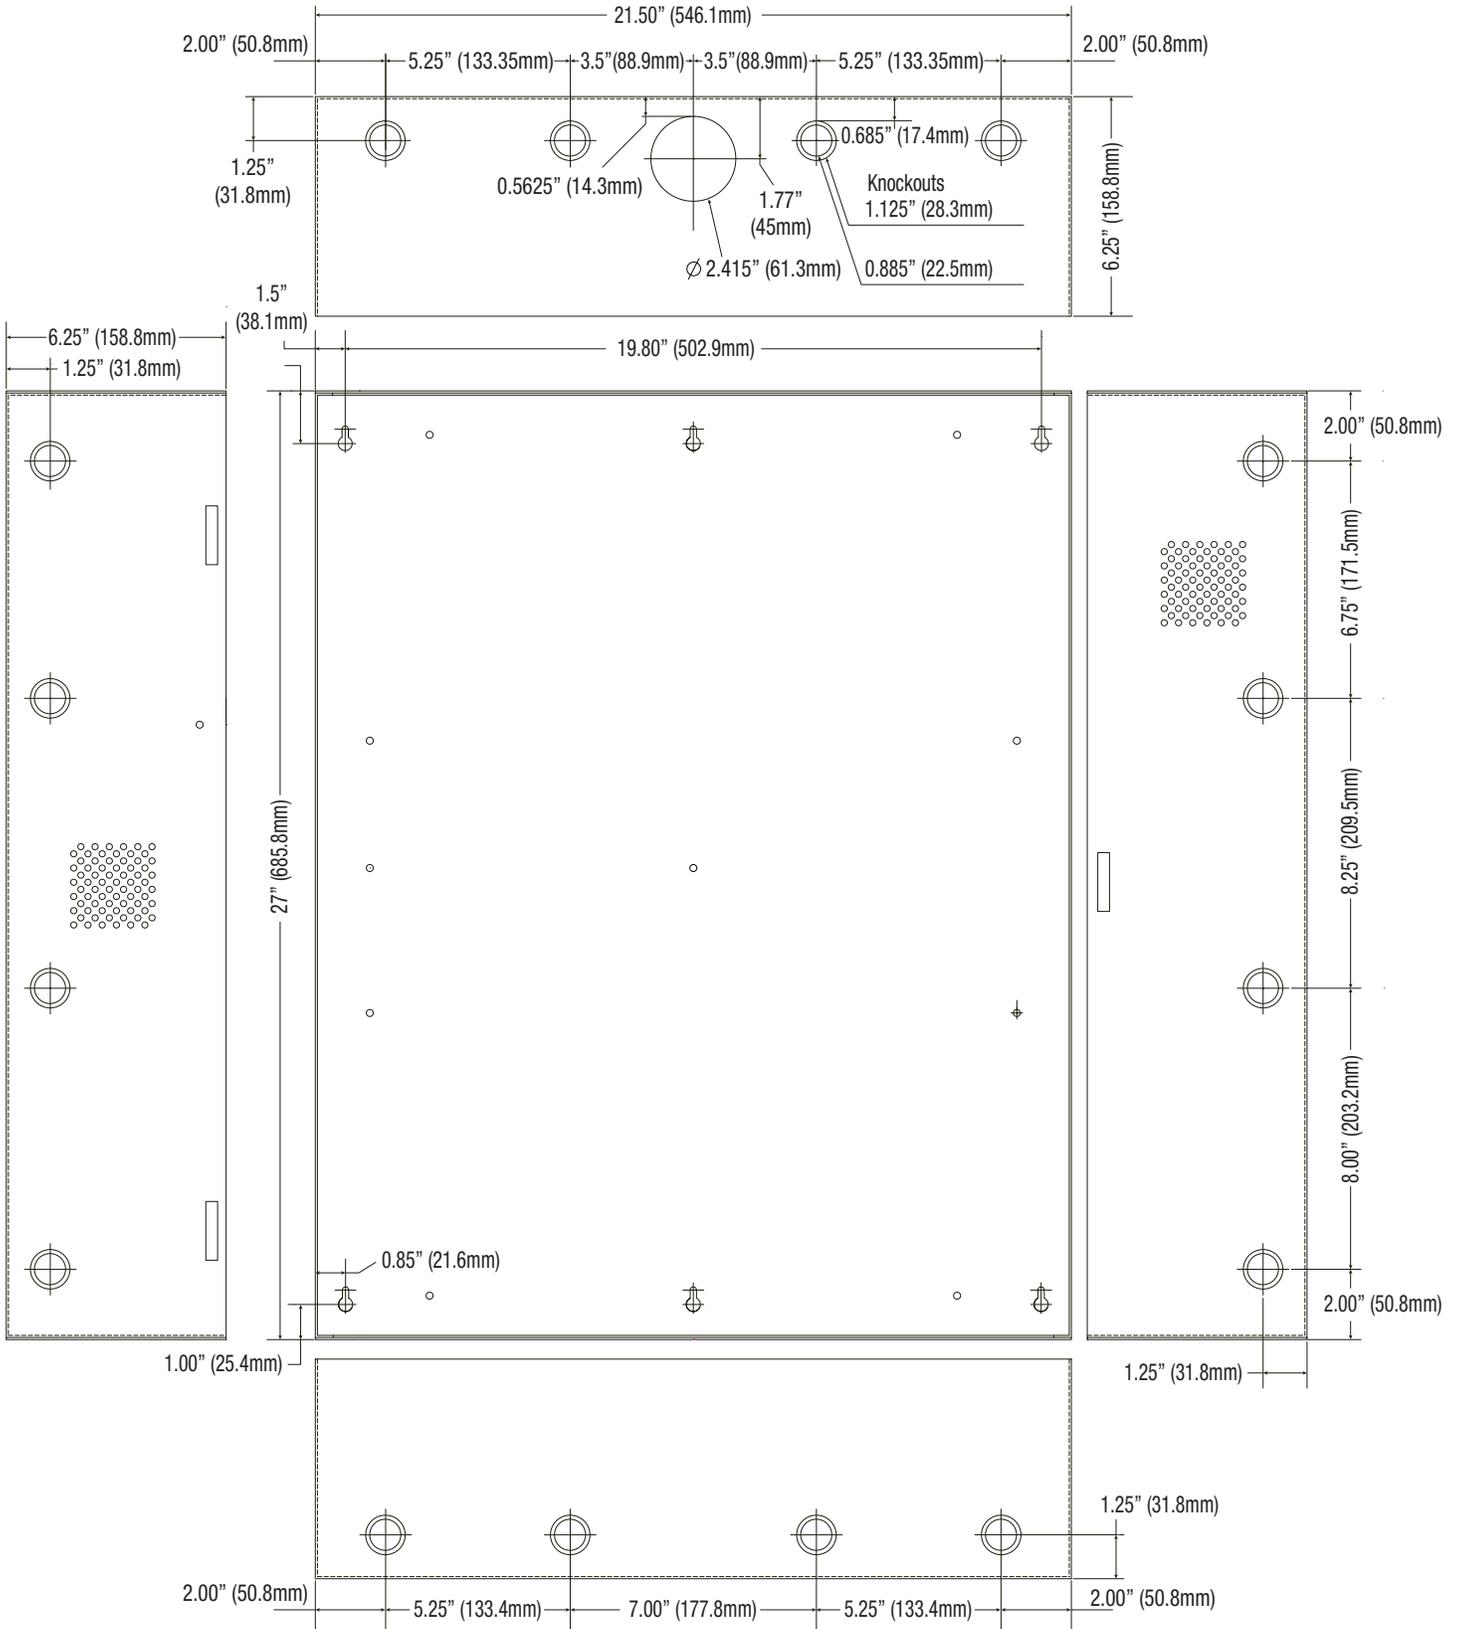

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IIT2SH7F8P(D)Q

D08Y

