

Access & Power Integration

Altronix/Mercury Wired Networked Kits

Models Include:

T3M75XK1AQ

16 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with TM3 Altronix/Mercury backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Two (2) Linq8ACM - Dual Input Networked Fused Access Power Controllers
- Two (2) PD8UL - Fused Power Distribution Modules
- One (1) Rocker Switch Bracket with Two (2) Rocker Switches
- Wire Harnesses and Finger Duct

T3M75XK1ADQ

16 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove3 enclosure with TM3 Altronix/Mercury backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Two (2) Linq8ACMCB - Dual Input Networked PTC Access Power Controllers
- Two (2) PD8ULCB - PTC Power Distribution Modules
- One (1) Rocker Switch Bracket with Two (2) Rocker Switches
- Wire Harnesses and Finger Duct

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. 022824



More than just power.™

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix T3M75XK1A(D)Q Trove Mercury kit is pre-assembled and consists of Trove enclosure/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. It also accommodates a variety of Mercury modules for up to sixteen doors in a single enclosure.

Configuration Chart:

Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage				Maximum Supply Current for Main and Aux. Outputs on Power Supply board and LINQ8ACM(CB) Access Power Controllers' outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Current Per LINQ8ACM(CB) Output (A)	LINQ8ACM(CB) Board Input Fuse (PTC) Rating	LINQ8ACM(CB) Board Output Fuse (PTC) Rating	PD8UL(CB) Board Output Fuse (PTC) Rating
				Power Supply 1		Power Supply 2							
				[DC]	[Aux]	[DC]	[Aux]						
T3M75XK1AQ	8	6.3A/250V 5A/250V	15A/ 32V	Output Range (VDC)	Output Range (VDC)	Output Range (VDC)	Output Range (VDC)	24VDC @ 9.2A	16	2.5	15A/ 32V	3A/ 32V	3.5A/ 250V
T3M75XK1ADQ				20.17- 26.4	20.28- 26.4	9.7- 13.2	10.03- 13.2						

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Connect unswitched AC power (120VAC 60Hz) to RSB2. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on.

This light can be seen through the LED lens on the door of the enclosure.


Keep power-limited wiring separate from non power-limited wiring (120VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.




Refer installation and servicing to qualified service personnel.

5. Measure voltage before connecting devices. This helps avoiding potential damage.
6. Mount Mercury modules to backplane(s), refer to *page 3, 4*.
7. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NB and eFlow102NB and corresponding *Installation Guides* for LINQ8ACM(CB) and PD8UL(CB) for further installation instructions.

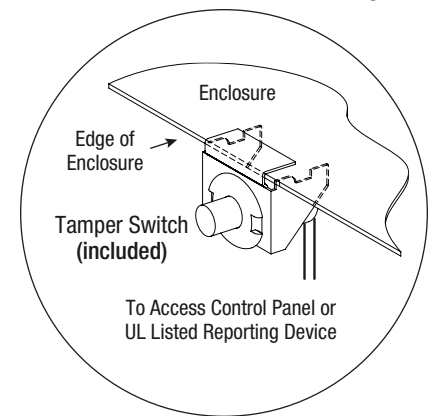Fig. 1



Hardware:

 Snap On Spacer |
  5/16" Pan Head Screw |
  Lock Nut

T3M75XK1A(D)Q Configuration:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2, pg. 3).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

LenelS2 / Mercury Access Controller	Pem Mounting
LNL-2220 / LP1502	(A)
LNL-1320 / MR52	(B) (C) (D) (E) (F) (G) (H)

Fig. 2

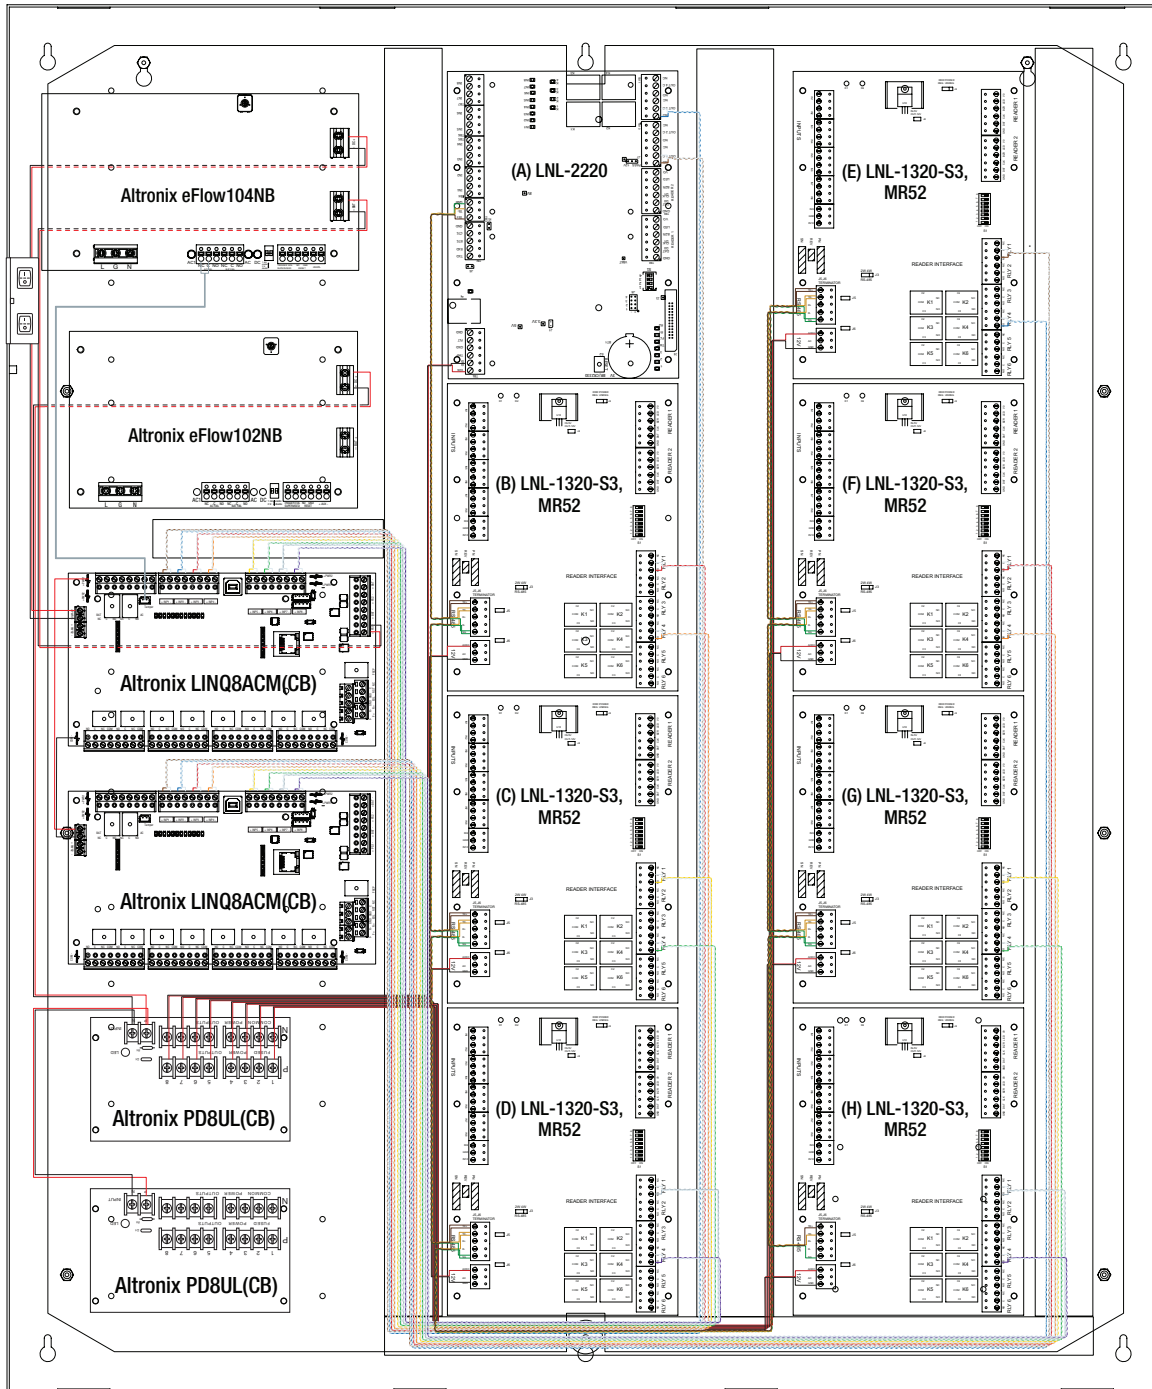


Fig. 2a

