



Access & Power Integration

Altronix/Azure Kits

Models Include:

T1AAK3F4S

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TAA1 Altronix/Azure backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) ACM4 - Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input Fused Power Distribution Module

T2AAK7F8S

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TAA2 Altronix/Azure backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8 - Dual Input Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input Fused Power Distribution Module

T1AAK3F4SD

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TAA1 Altronix/Azure backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) ACM4CB - PTC Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8CB - Dual Input PTC Power Distribution Module

T2AAK7F8SD

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TAA2 Altronix/Azure backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACMS8CB - Dual Input PTC Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8CB - Dual Input PTC Power Distribution Module

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. TAAK_090823

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



More than just power.™

Overview:

Altronix Trove Azure kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. These kits also accommodate various Azure boards for up to eight (8) doors in a single enclosure.

Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM4(CB) or ACMS8(CB) Access Power Controllers' outputs	Nominal DC Output Voltage		Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fused (PTC) Outputs	ACM4(CB) Board Input Fuse (PTC) Rating	ACM4(CB) Board Output Fuse (PTC) Rating	ACMS8(CB) Board Input Fuse (PTC) Rating	ACMS8(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating
					[DC]	[Aux]								
					Output Range (VDC)	Output Range (VDC)								
T1AAK3F4	3.5	5A/250V	10A/32V	24VDC @ 6A	20.17-26.4	20.28-26.4	4	8	10A/32V	3A/32V	-	-	10A/32V	3A/32V
T1AAK3F4D									9A	2.5A			9A	2.5A
T2AAK7F8S	4.5	6.3A/250V	15A/32V	24VDC @ 9.4A	20.17-26.4	20.28-26.4	8	8	-	-	15A/32V	3A/32V	10A/32V	3A/32V
T2AAK7F8SD											9A	2.5A	9A	2.5A

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Connect unswitched AC power (115VAC 60Hz) to terminals marked [L, N]. Use 14 AWG or larger for all power connections. Secure green wire lead to earth ground. Green "AC" LED on power supply board will turn on. This light can be seen through the LED lens on the door of the enclosure.
Keep power-limited wiring separate from non power-limited wiring (115VAC 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.
CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside.
Refer installation and servicing to qualified service personnel.
5. Measure voltage before connecting devices. This helps avoiding potential damage.
6. Mount Azure modules to backplane, refer to *pages 3, 4*.
7. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NB, eFlow104NB and corresponding *Sub-Assembly Installation Guides* for ACM4(CB), ACMS8(CB), PDS8(CB) and VR6 for further installation instructions.

Fig. 1

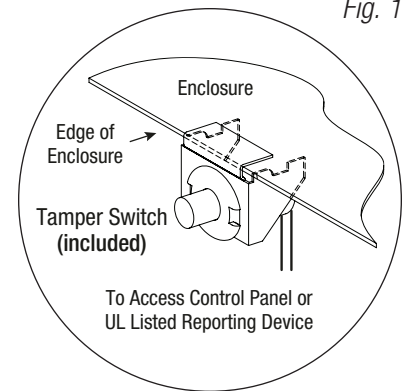


Hardware:

 Nylon Spacer |
  5/16" Pan Head Screw |
  Lock Nut

1. Fasten spacers (provided) to pems that match the hole pattern for Azure Modules (*Fig. 2, pg. 3*).
2. Mount Azure modules to spacers utilizing 5/16" pan head screws (provided) (*Fig. 2a, pg. 3*).
3. Fasten TAA1 backplane to Trove1 enclosure utilizing hardware (provided).

Altronix/Azure	Pem Mounting
IC4	(A)
IC2	(B)
RI2M	(C)

The diagram illustrates the Altronix eFlow6NB system architecture. At the top left is the main **Altronix eFlow6NB** unit, which includes a battery (BAT) and a DC power input. To its right is the **Altronix PDS8(CB)** relay unit, which is noted to have an **Altronix VR6** mounted underneath it. Below the relay is the **Altronix ACM4(CB)** access controller, featuring a TRIGGER INPUT, TRG, and four LEDs (LED1, LED2, LED3, LED4). The bottom section shows two door units, labeled **A** and **B**, each with a **C** terminal. A common line (C) connects the **C** terminals of both door units to the **DC** terminal of the main unit. The **ACM4** access controller is also connected to the **DC** terminal of the main unit.





T2AAK7F8S(D): Configuration of Azure Modules:

1. Fasten spacers (provided) to pems that match the hole pattern for Azure Modules (Fig. 3, pg. 4).
2. Mount Azure modules to spacers utilizing 5/16" pan head screws (provided) (Fig. 3a, pg. 4).
3. Fasten TAA2 backplane to Trove2 enclosure utilizing hardware (provided).

Azure Access Controller Position Chart for the Following Models:

Altronix/Azure	Pem Mounting
IC4	(A)
IC2	(B)
RI2M	(C)


Fig. 3 - T2AAK7F8S(D): Configuration

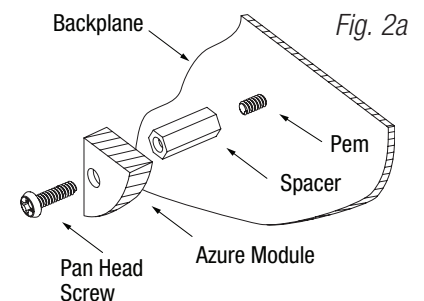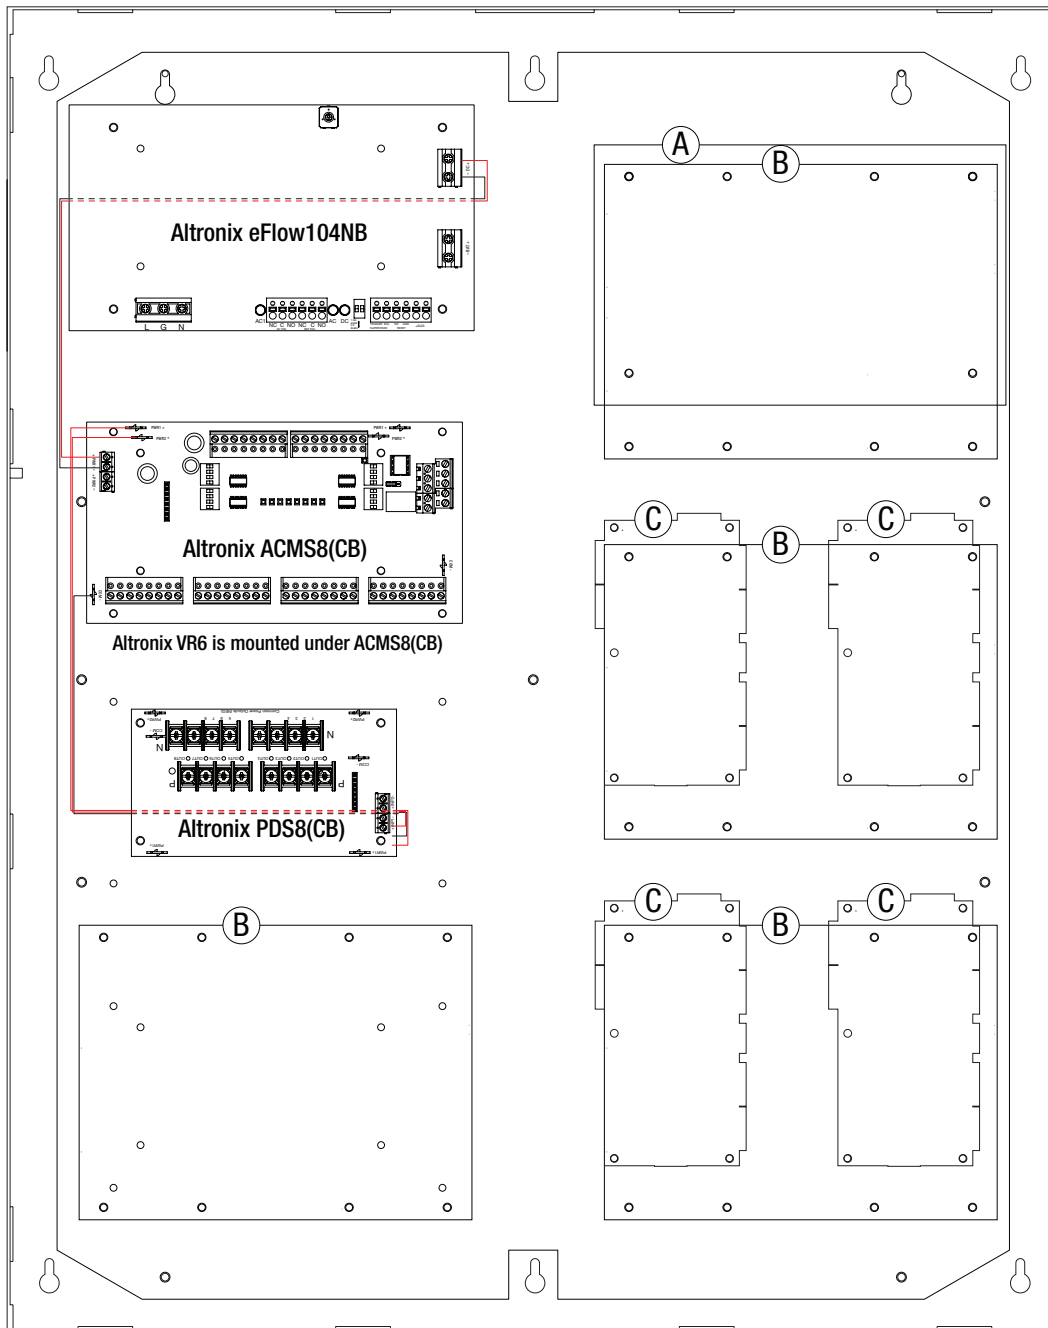

Notes:



eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

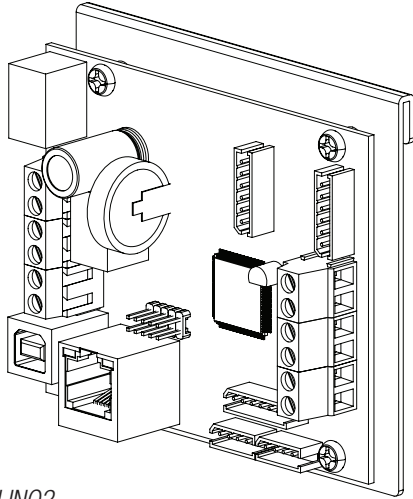

LINQ2

LINQ™


LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

Features:


- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

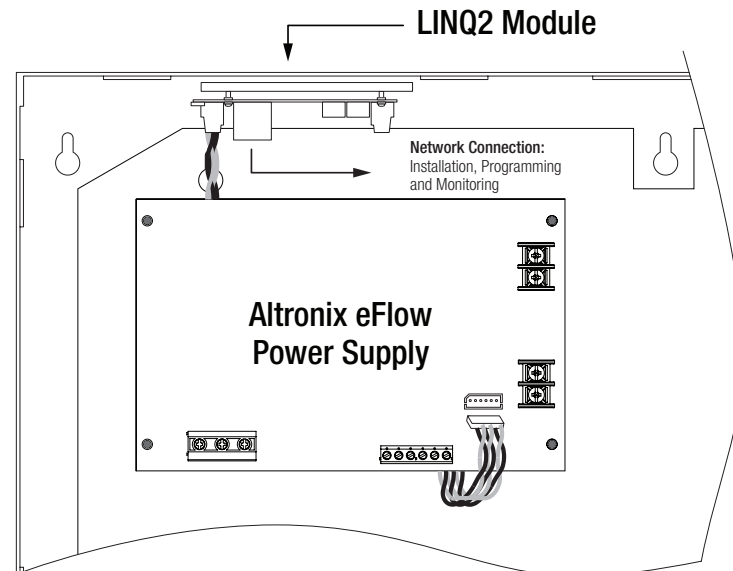

T1AAK3F4(D) Enclosure Dimensions (H x W x D approximate):

18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

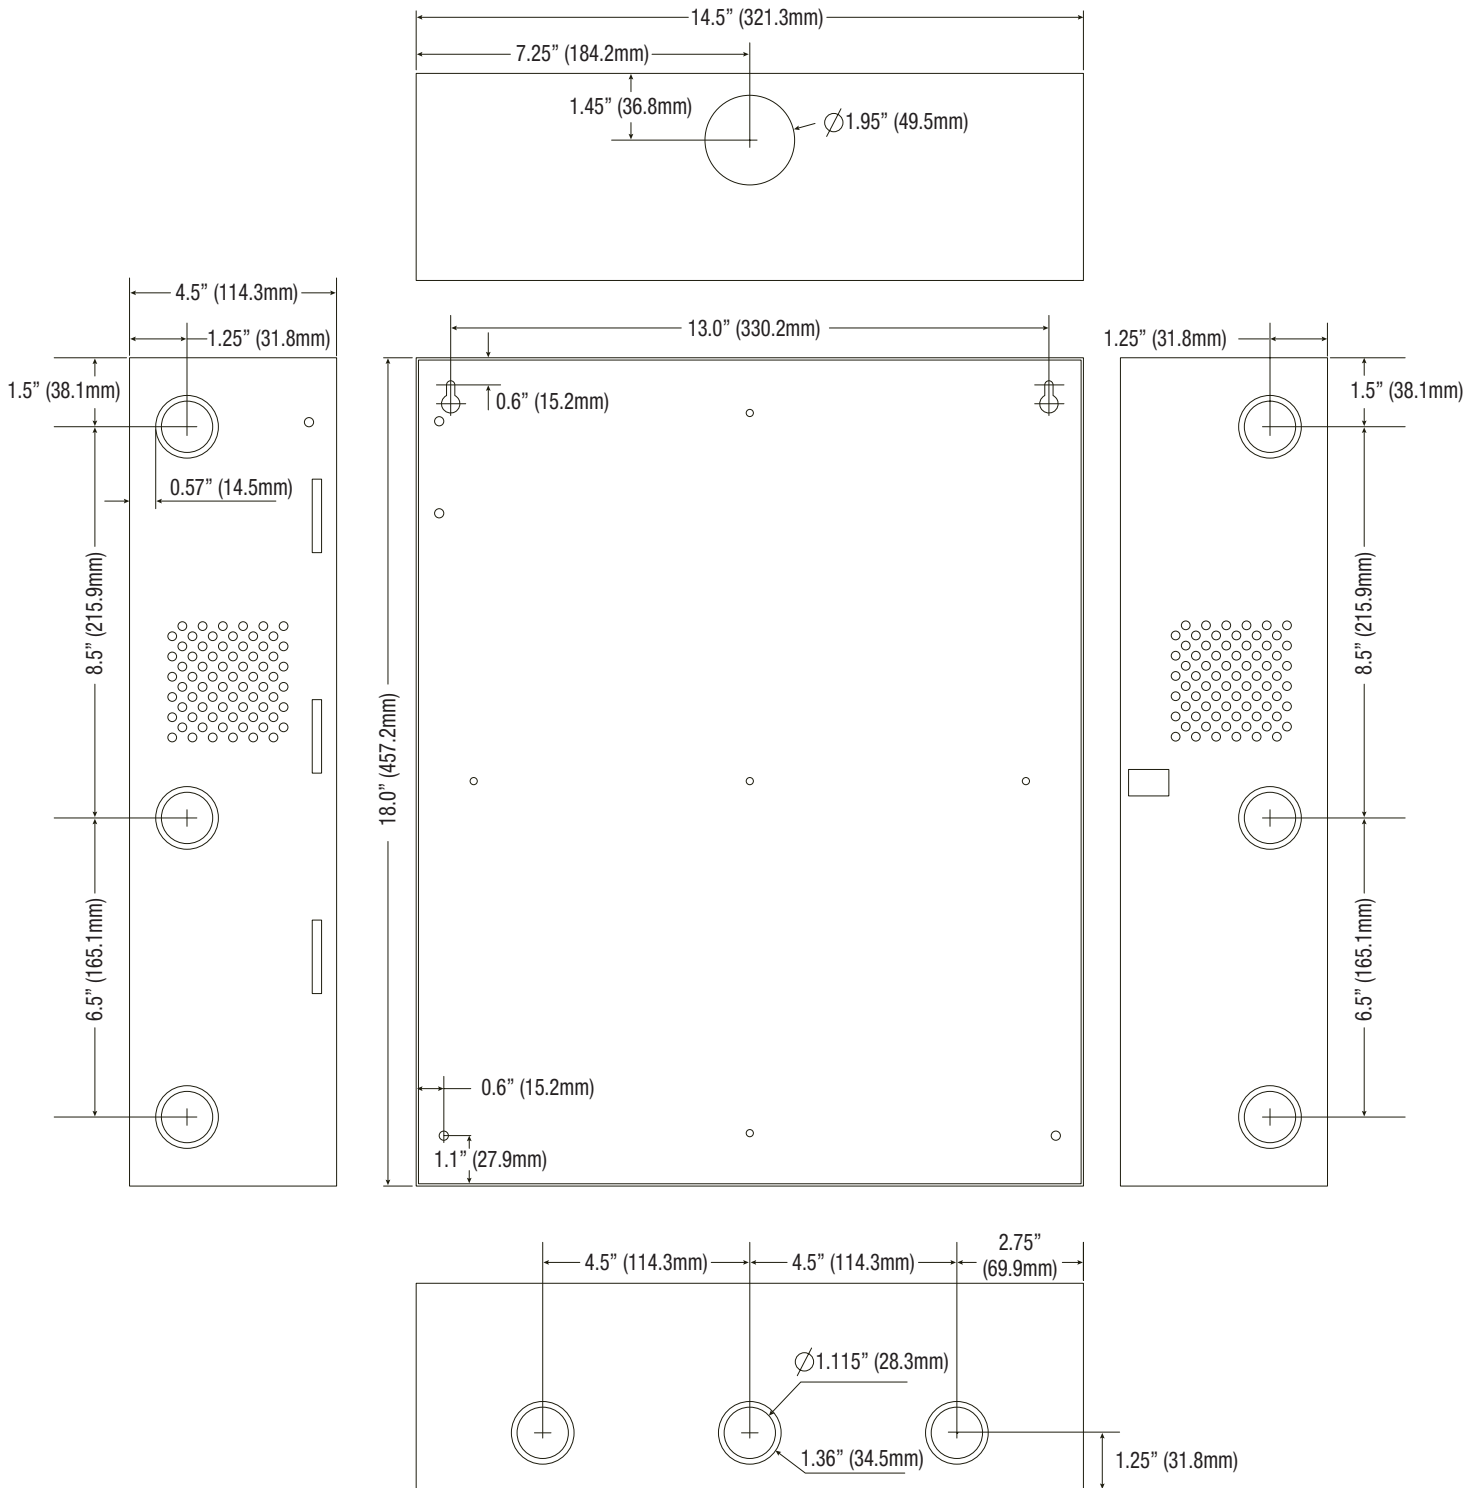

27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

